


Installation Instructions


860692392-AMK-002-INSTALL INSTALLATION INSTRUCTION

INSTALLATION,AMK,ERICSSON,DBHP

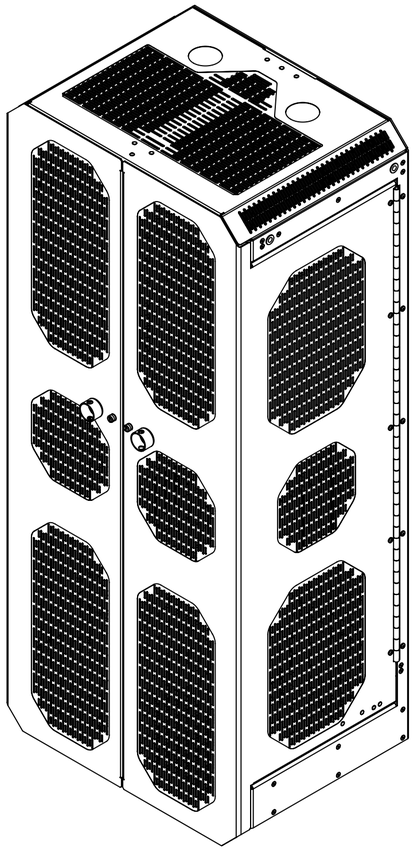

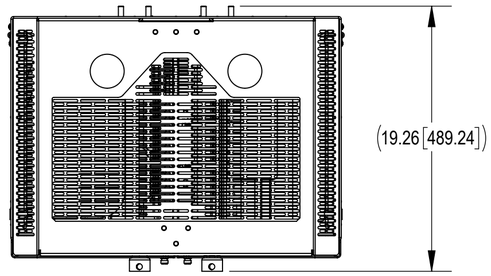

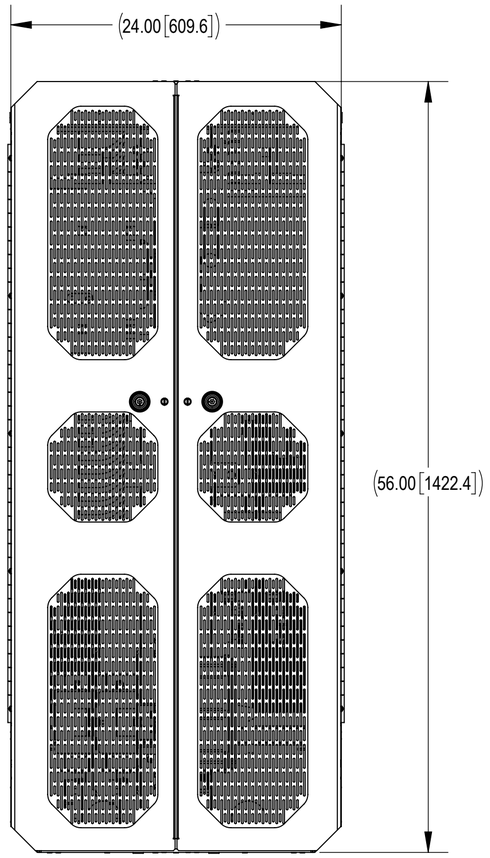

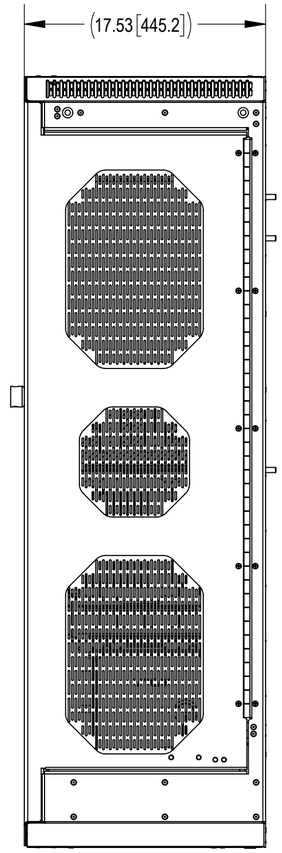

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	INITIAL RELEASE	ZL1057 08JUN26	LX1002 50108706AMO

This table show the evolution and history of document from initial to current version.


Further information regarding ANDREW's commitment can be found at https://www.andrew.com/sustainability/.
Visit our website or contact your local ANDREW representative for more information.
This product is covered by one or more U.S. patents or their foreign equivalents. For patents, see www.adwpat.com

Installation Instructions


1.0 GENERAL NOTES
  1.1 ALL METRIC DIMENSIONS ARE IN BRACKETS [X.X]
2.0 DESIGN NOTES
3.0 MANUFACTURING/SPECIAL REQUIREMENTS
  3.1 TIGHTEN HARDWARES, TORQUE VALUE ARE SHOWN BELOW AS REFERENCE,
    M6: TORQUE 40.0 IN-LB OR 4.5 N-M (W/ CLIP NUT)
    M6: TORQUE 46.0 IN-LB OR 5.2 N-M (W/ THREADED CAST AL)
    M6: TORQUE 75.0 IN-LB OR 8.5 N-M (W/ STEEL NUT)
    M8: TORQUE 6.6 FT-LB OR 9.0 N-M (W/ THREADED CAST AL)
    M10: TORQUE 16.2 FT-LB OR 22 N-M (W/ THREADED CAST AL)
    1/4-20: TORQUE 4.8 FT-LB OR 6.6 N-M
    3/8-16: TORQUE 19.6 FT-LB OR 26.6 N-M
  3.2 CONFIGURATIONS AND QUANTITY OF EQUIPMENTS IN INSTALLATION ARE LISTED ON TABLE.
  3.3 EQUIPMENT INSTALLATION INSTRUCTION ON PAGE 3.

ERICSSON CONFIGURATION	3.2 APPROVED ERICSSON RADIO CONFIGURATIONS								
	4455	4435	4449	4426	8843	4478	PSU AC08	QUAD DIPLEXER SDX1926Q-43	RAYCAP "RSCAC SERIES"
E1	1	1							1
E2	1		1				2	1	1
E3			1	1			3		1
E4					1	1	3		1

Installation Instructions

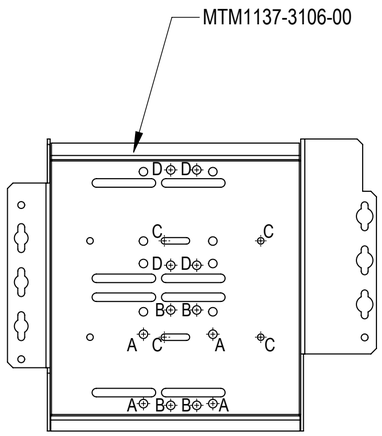


"A": 4455
"B": 4426
"C": 4435
"D": 4478

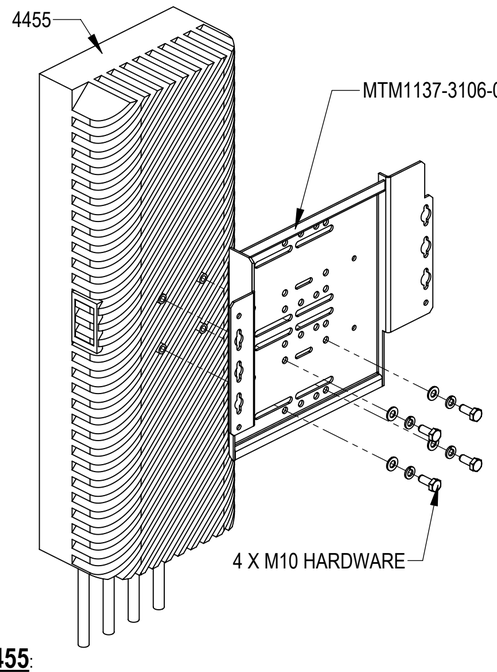


4455:

INSTALL 4455 TO THE BRACKET MTM1137-3106-00 USING 4 SETS OF M10 HEX BOLT, LOCK WASHER AND FLAT WASHER AS SHOWN

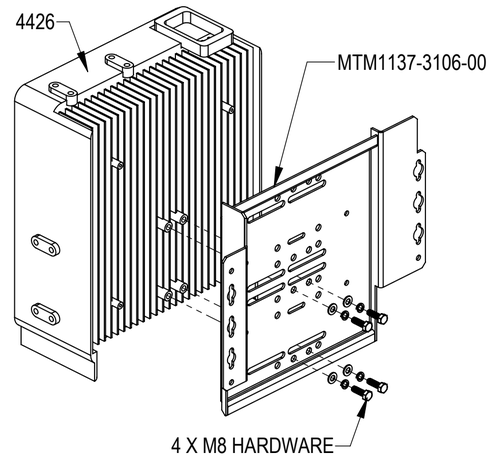


4426:

INSTALL 4426 TO THE BRACKET MTM1137-3106-00 USING 4 SETS OF M8 HEX BOLT, LOCK WASHER AND FLAT WASHER AS SHOWN

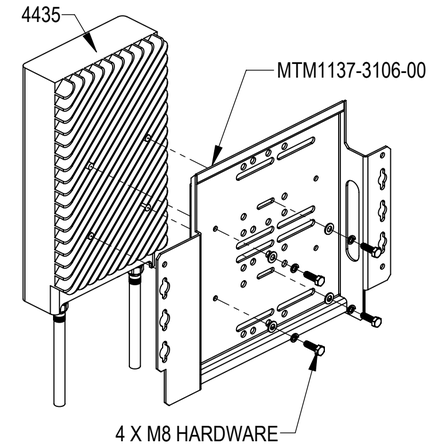


4435:

INSTALL 4435 TO THE BRACKET MTM1137-3106-00 USING 4 SETS OF M8 HEX BOLT, LOCK WASHER AND FLAT WASHER AS SHOWN

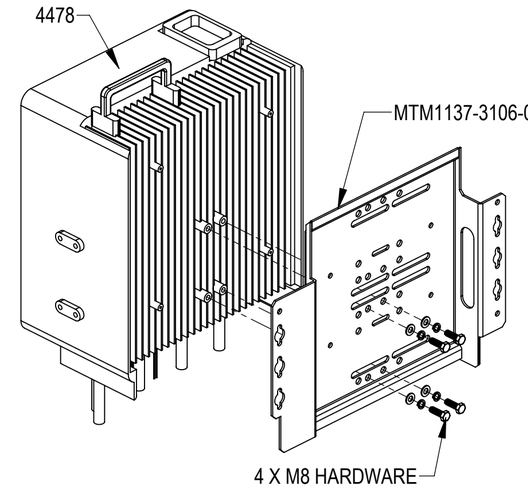


4478:

INSTALL 4478 TO THE BRACKET MTM1137-3106-00 USING 4 SETS OF M8 HEX BOLT, LOCK WASHER AND FLAT WASHER AS SHOWN

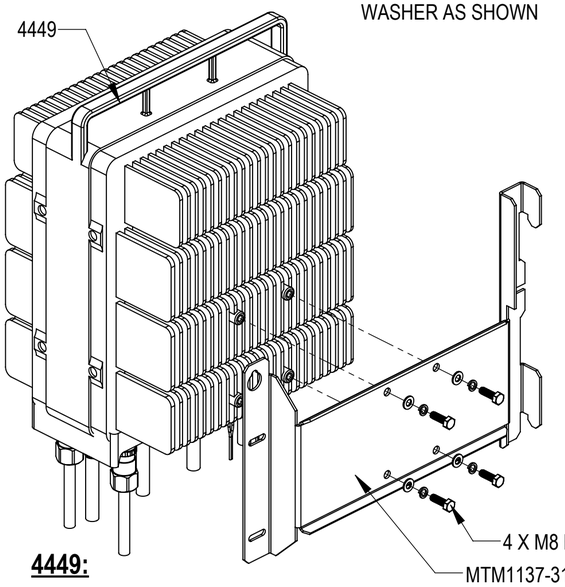


4449:

INSTALL 4449 TO THE BRACKET MTM1137-3112-00 USING 4 SETS OF M8 HEX BOLT, LOCK WASHER AND FLAT WASHER AS SHOWN

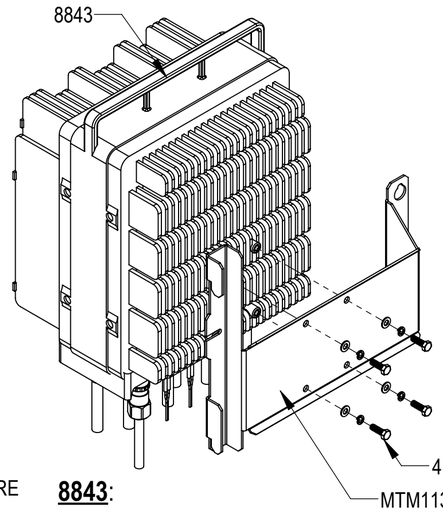


8843:

INSTALL 8843 TO THE BRACKET MTM1137-3110-00 USING 4 SETS OF M8 HEX BOLT, LOCK WASHER AND FLAT WASHER AS SHOWN

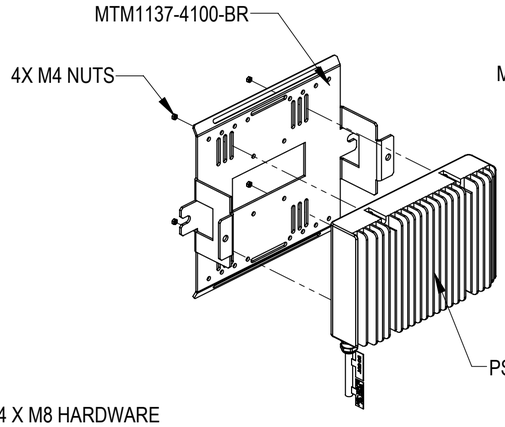


PSU AC08:

INSTALL PSU AC08 TO THE BRACKET MTM1137-4100-BR USING M4 CAPTIVE HARDWARE PROVIDED WITH THE PSU.

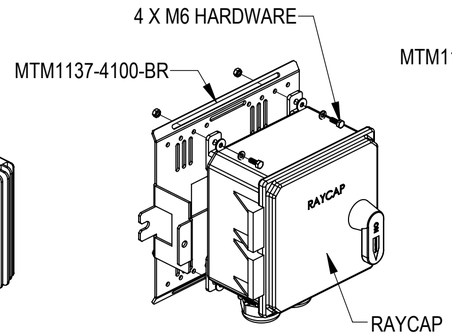

RAYCAP INSTALLATION:

INSTALL RAYCAP TO THE BRACKET MTM1137-4100-BR USING 4 SETS OF M6 HARDWARE

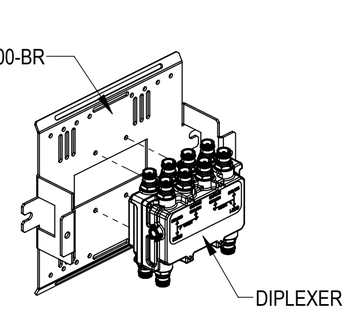


DIPLEXER INSTALLATION:


INSTALL THE DIPLEXER TO THE BRACKET MTM1137-4100-BR USING M5 CAPTIVE HARDWARE PROVIDED WITH THE PSU.

ANDREW®
an Amphenol company

HARDWARE INSTALLATION (E1)

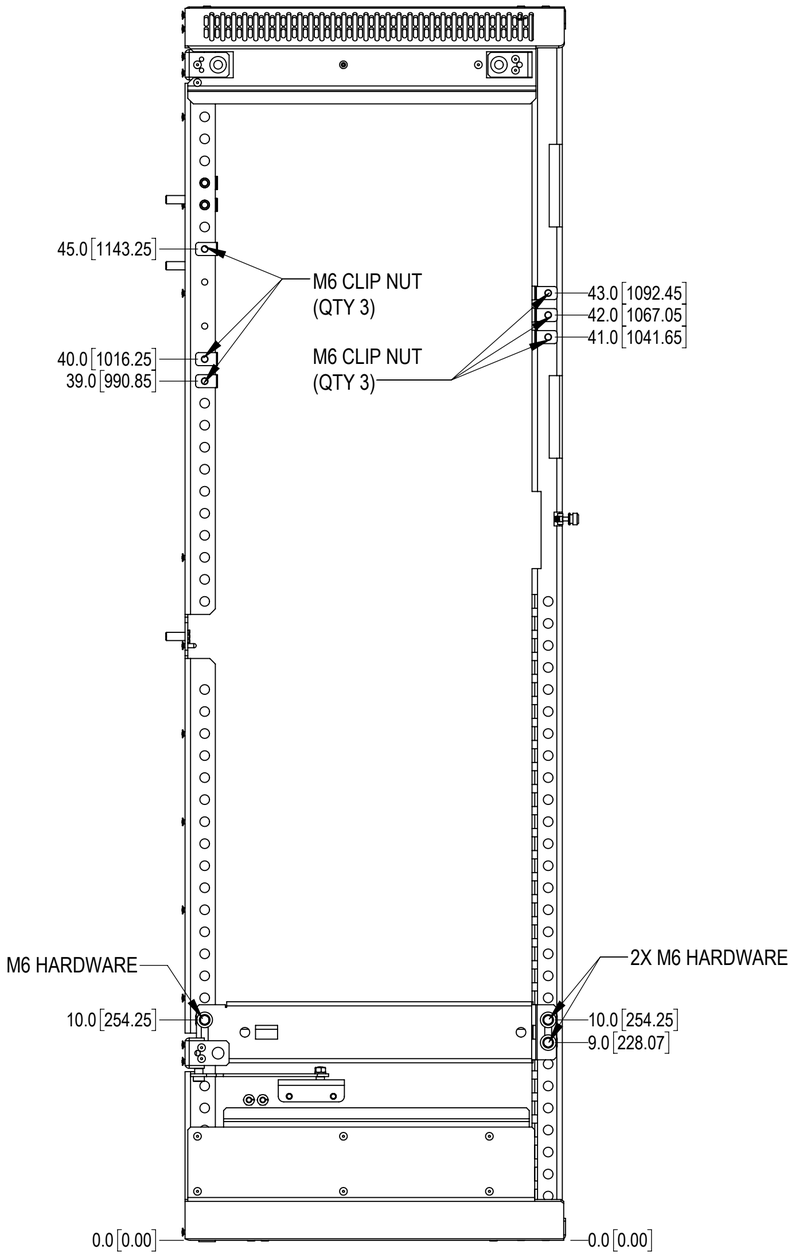


LEFT SIDE VIEW
(BRACKET SHOWN FOR REFERENCE)
(EQUIPMENT NOT SHOWN)

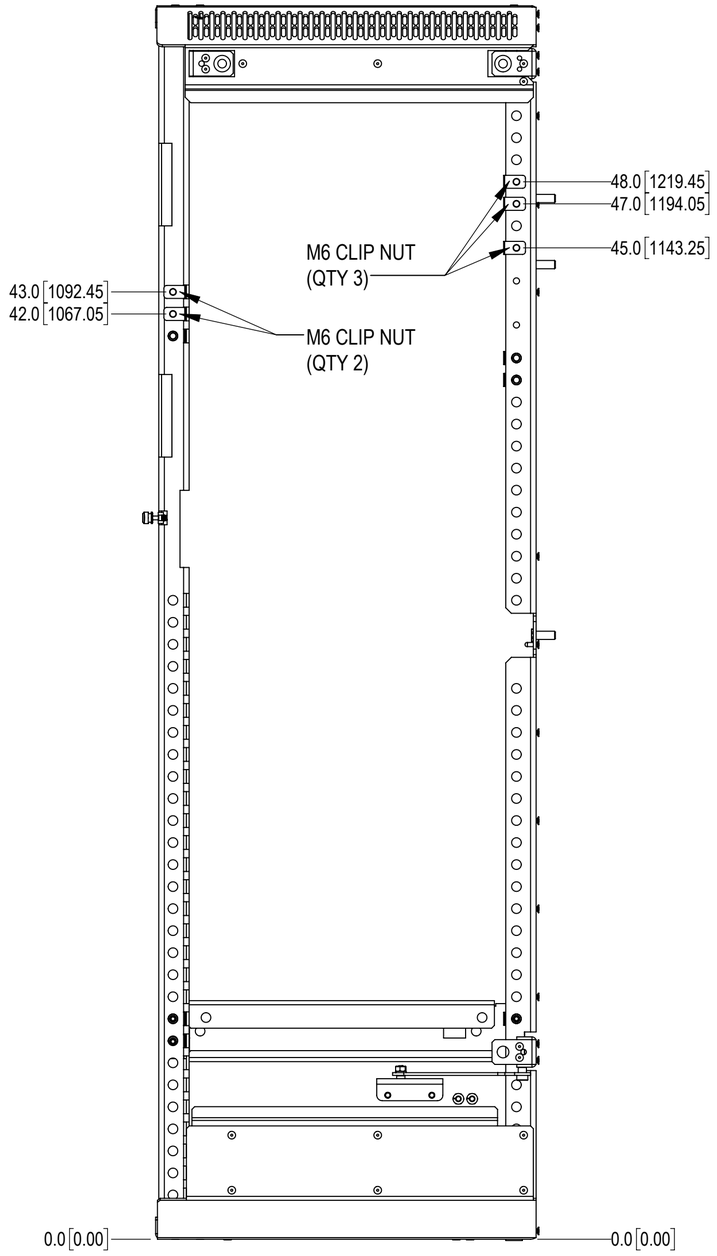

RIGHT SIDE VIEW
(BRACKET SHOWN FOR REFERENCE)
(EQUIPMENT NOT SHOWN)


ANDREW®
an Amphenol company

E1- 4455 & 4435, RAYCAP

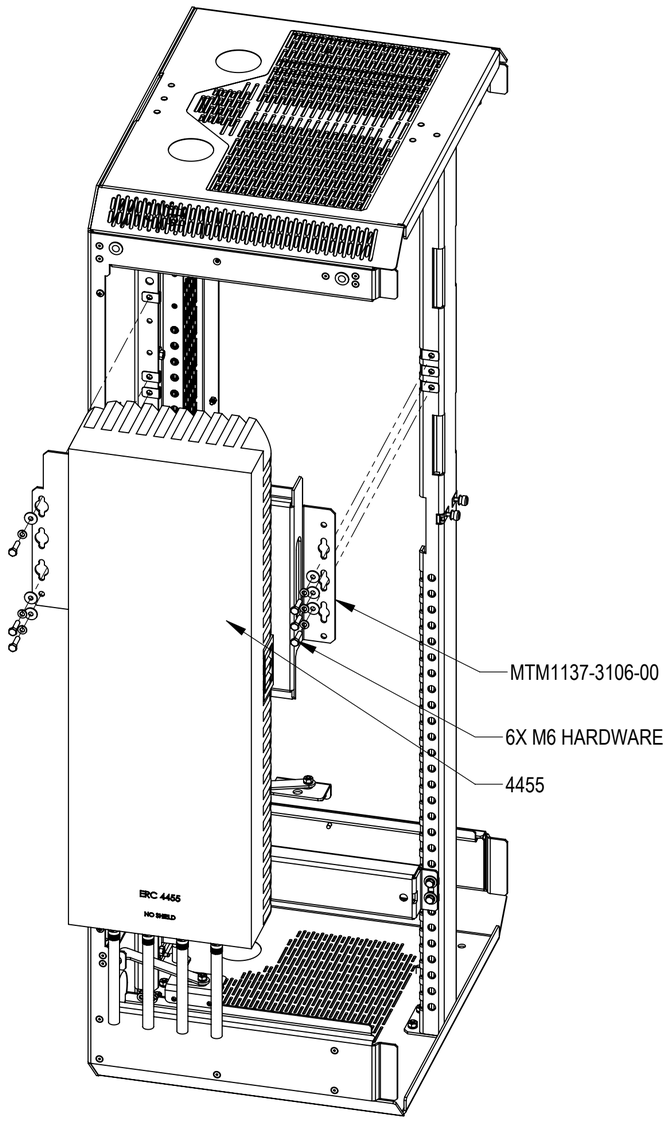


4455 INSTALLATION

INSTALL 4455 WITH BRACKET MTM1137-3106-00 ON ENCLOSURE AND SECURE BY 6 SETS OF M6 SCREW AND CLIP NUT

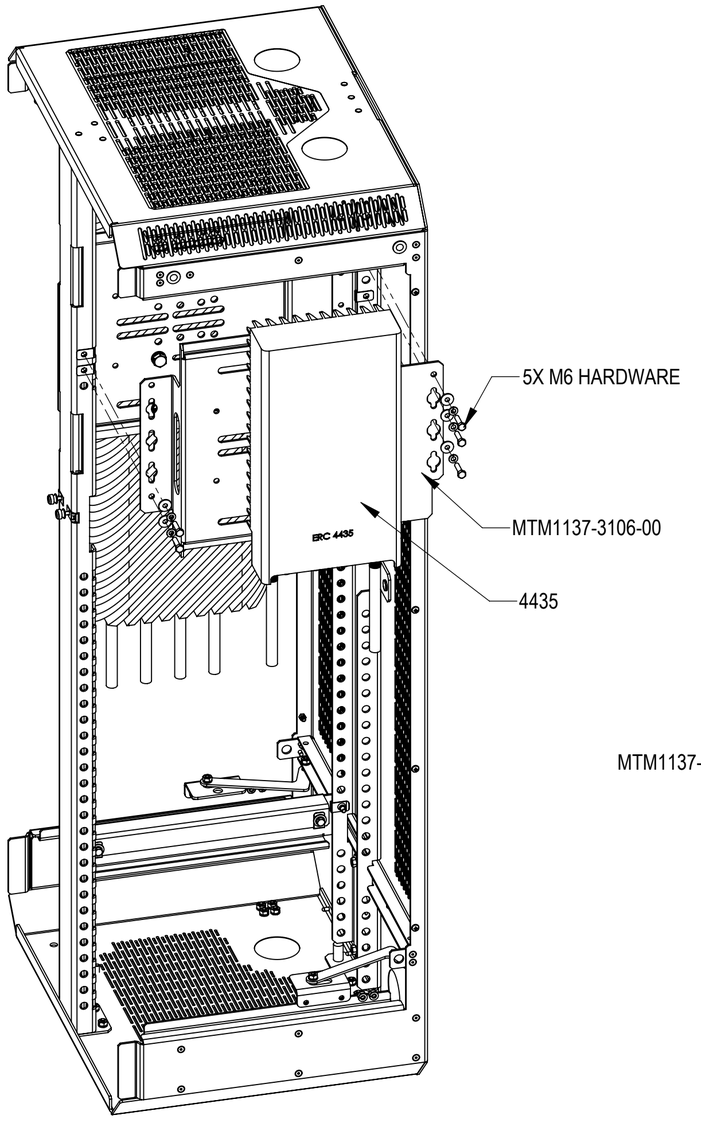

4435 INSTALLATION

INSTALL 4435 WITH BRACKET MTM1137-3106-00 ON ENCLOSURE AND SECURE BY 5 SETS OF M6 SCREW AND CLIP NUT

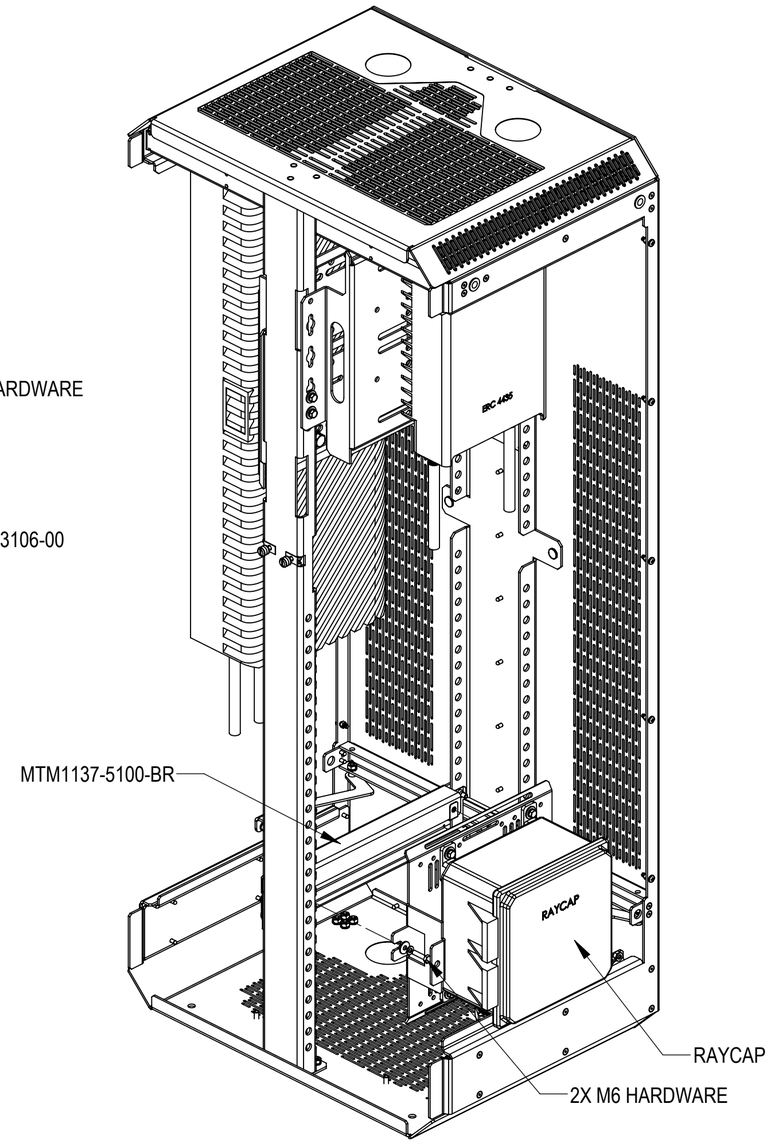


RAYCAP INSTALLATION:


INSTALL RAYCAP WITH BRACKET ON MOUNT BRACKETS MTM1137-5100-BR USING 2 SETS OF M6 HEX BOLT, FLAT WASHER AND CLIP NUT

ANDREW®
an Amphenol company

HARDWARE INSTALLATION (E2 & E3)

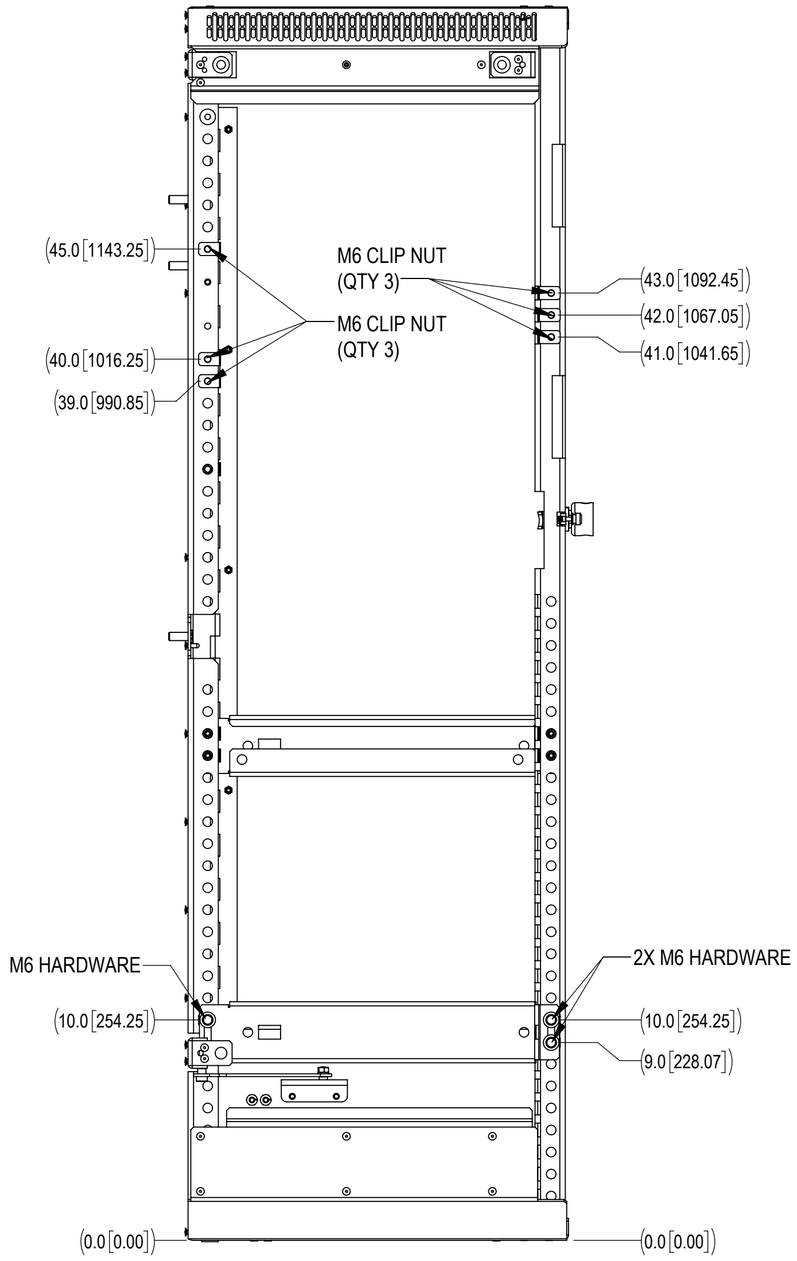


LEFT SIDE VIEW
(BRACKET SHOWN FOR REFERENCE)
(EQUIPMENT NOT SHOWN)

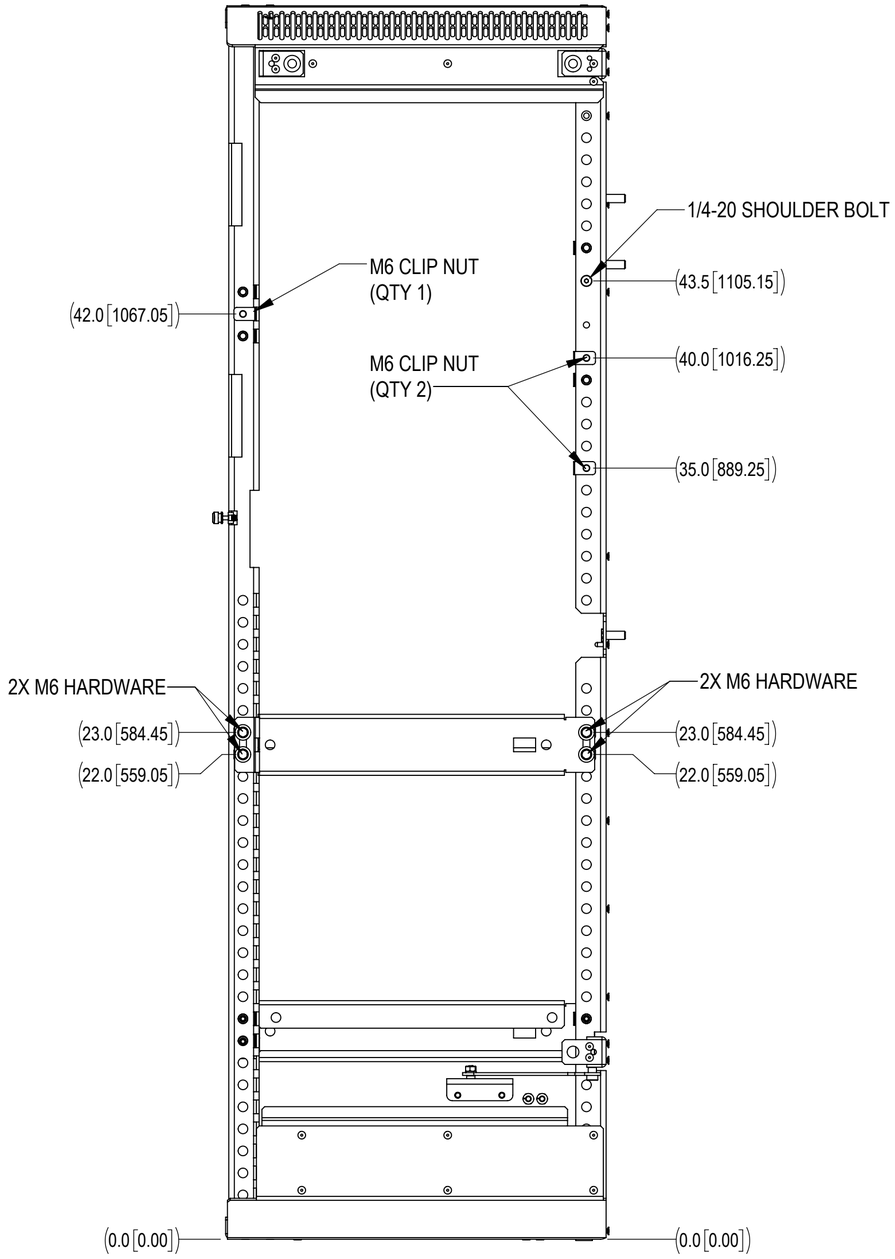

RIGHT SIDE VIEW
(BRACKET SHOWN FOR REFERENCE)
(EQUIPMENT NOT SHOWN)


ANDREW®
an Amphenol company

E2- 4455 & 4449 & (2X)AC08, DIPLETER AND RAYCAP
E3- 4426 & 4449 & (3X)AC08, RAYCAP

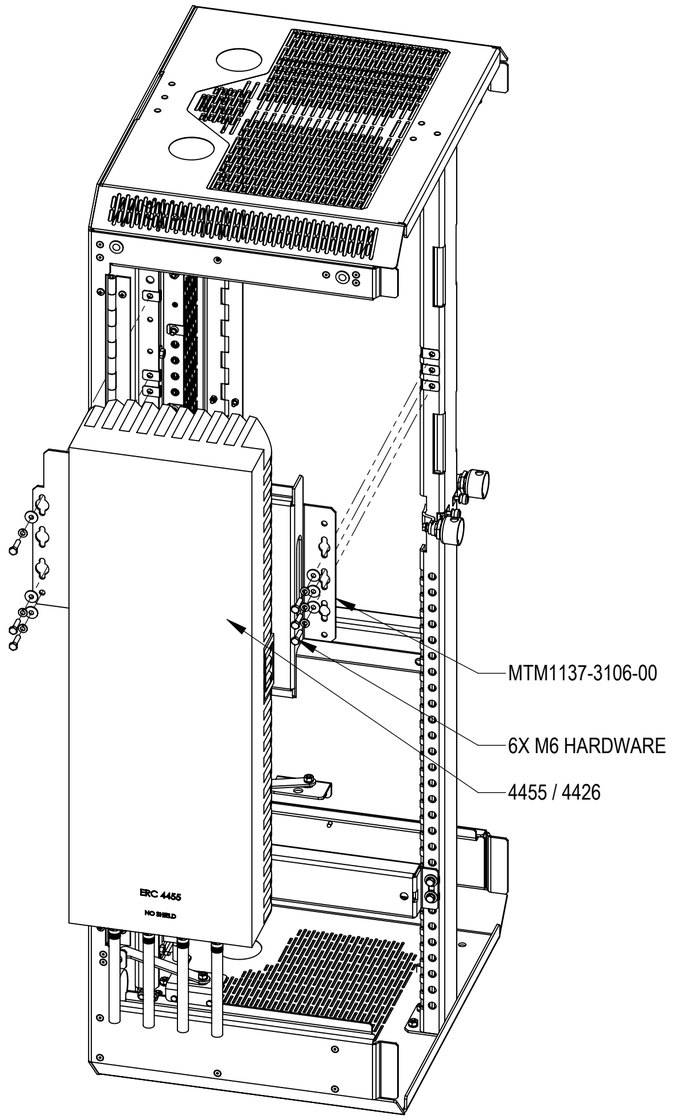


4455 / 4426 INSTALLATION

INSTALL 4455 OR 4426 WITH BRACKET MTM1137-3106-00 ON ENCLOSURE AND SECURE BY 6 SETS OF M6 SCREW AND CLIP NUT

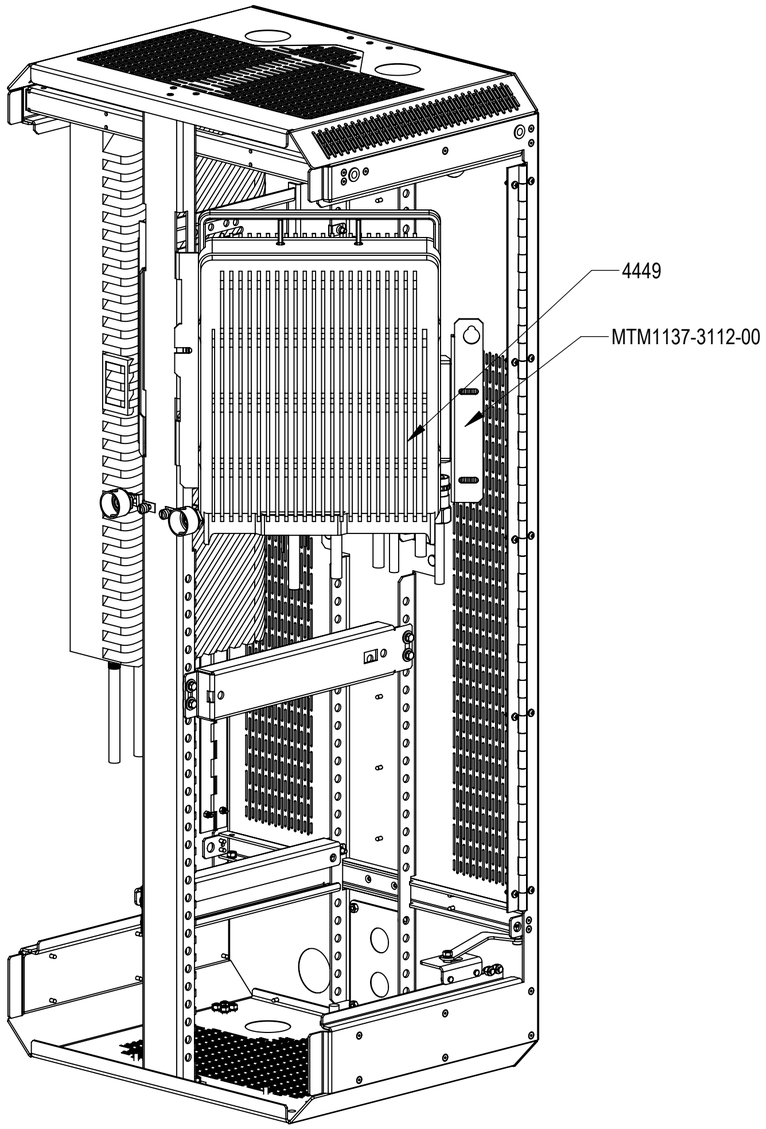

4449 INSTALLATION


1) INSTALL SHOULDER BOLT IN TOP LOCATION AS SHOWN (SEE SHEET 6)
2) HOLD RRU PANEL BETWEEN 45-90 DEG. INSERT BOTH TABS INTO SLOT ON UPRIGHT
3) ROTATE PANEL INTO PLACE AND LIFT ONTO THE REAR UPRIGHT SHOULDER BOLT FOR SUPPORT

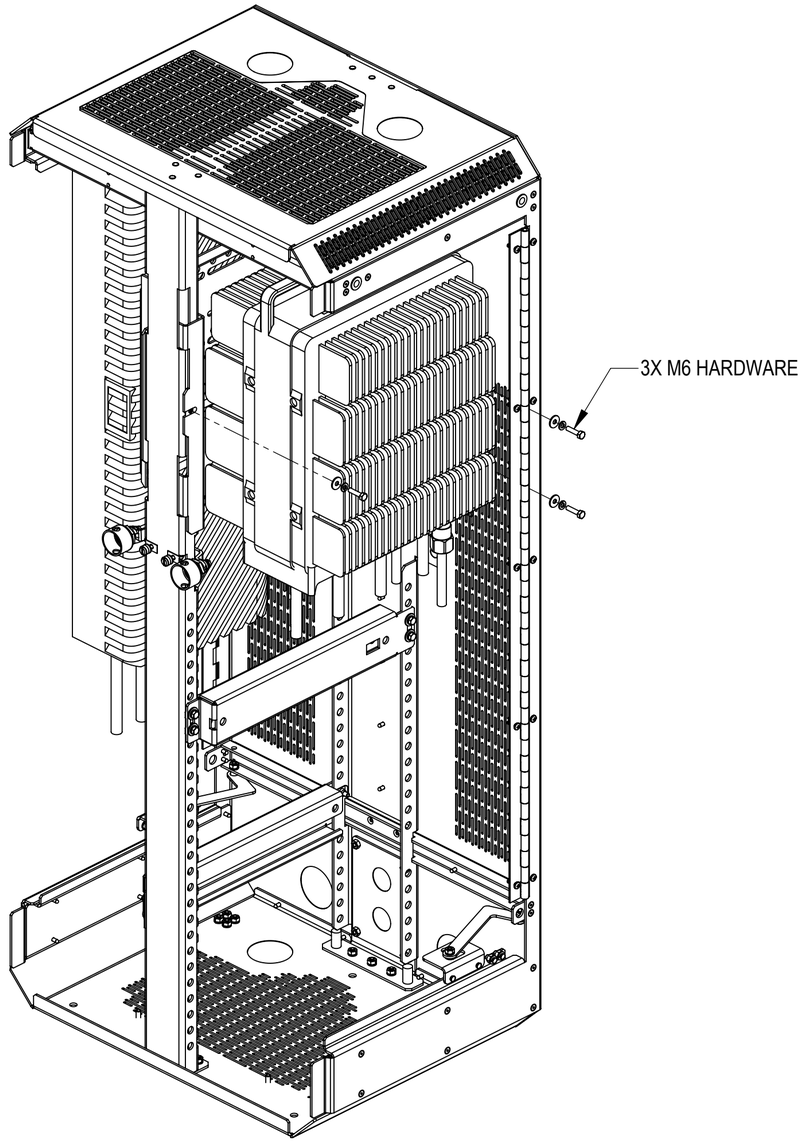

4) SECURE PANEL WITH PROVIDED M6 HARDWARE


ANDREW®
an Amphenol company

E2- 4455 & 4449 & (2X)AC08, DIPLETER AND RAYCAP
E3- 4426 & 4449 & (3X)AC08, RAYCAP

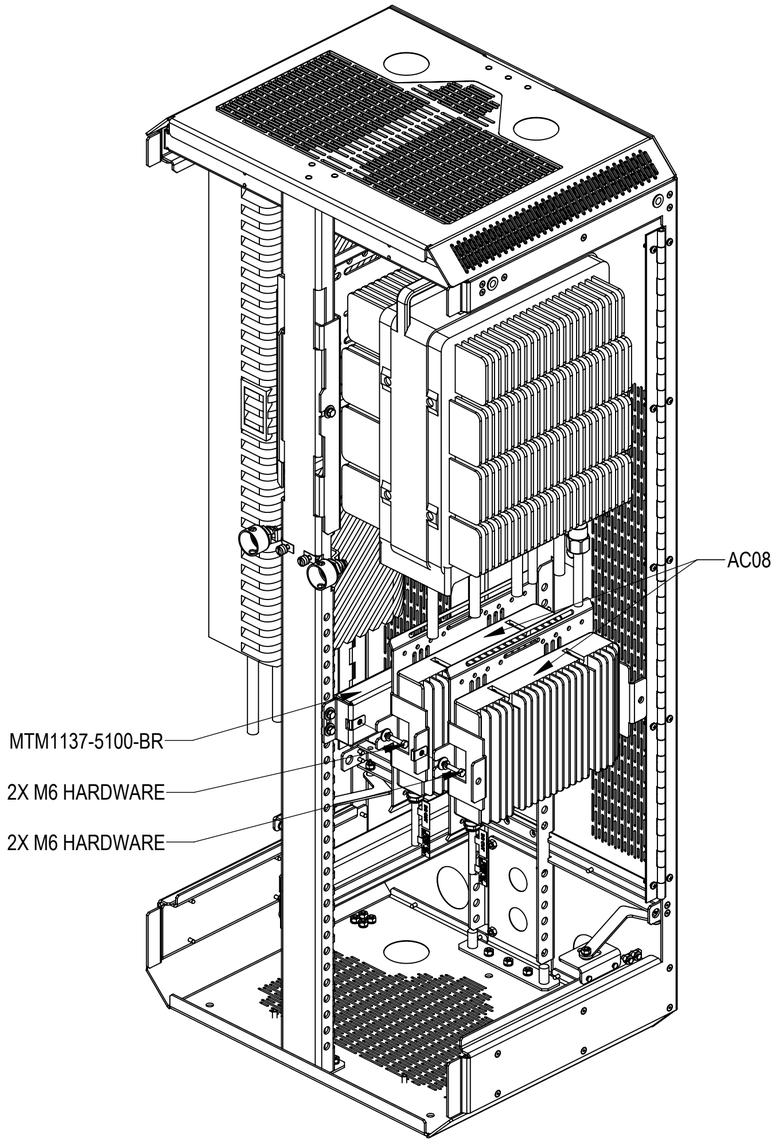


(2X)AC08 INSTALLATION:

INSTALL AC08 WITH BRACKET ON MOUNT BRACKETS MTM1137-5100-BR USING 2 SETS OF M6 HEX BOLT, FLAT WASHER AND CLIP NUT

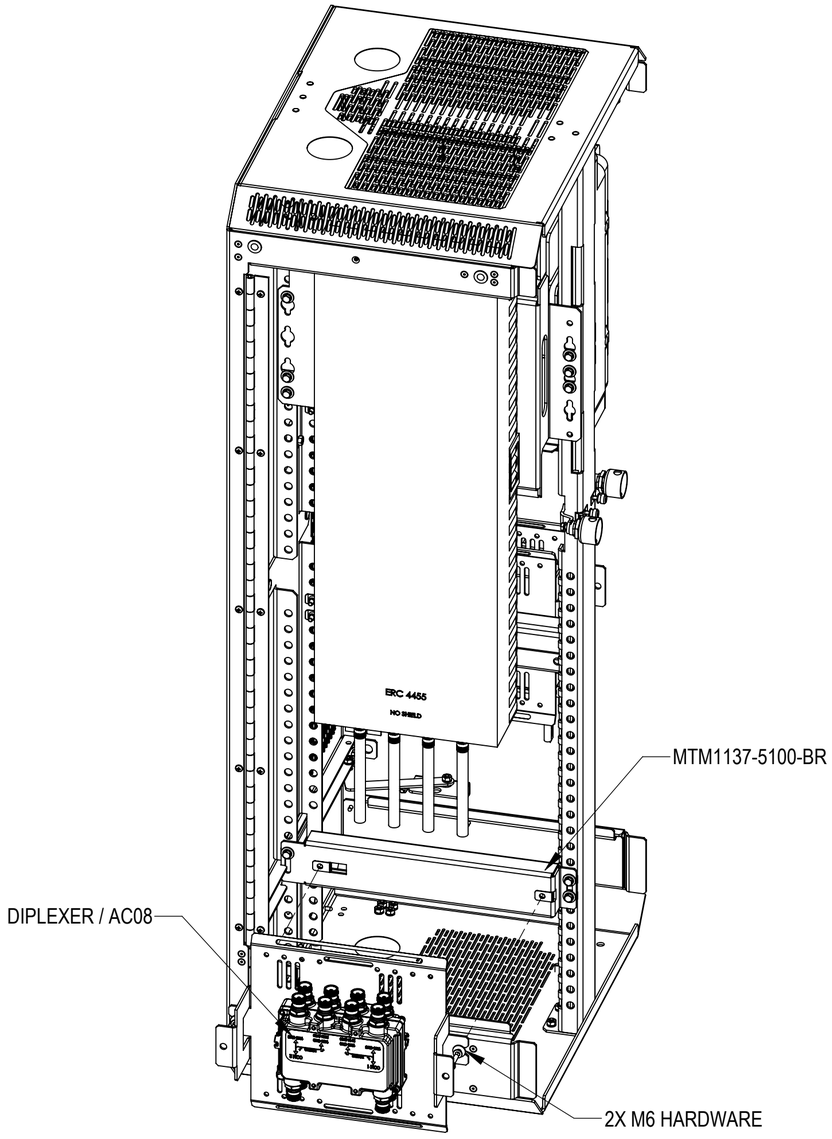

DIPLEXER / AC08 INSTALLATION:

INSTALL DIPLEXER WITH BRACKET ON MOUNT BRACKETS MTM1137-5100-BR USING 2 SETS OF M6 HEX BOLT, LOCK WASHER, FLAT WASHER AND CLIP NUT

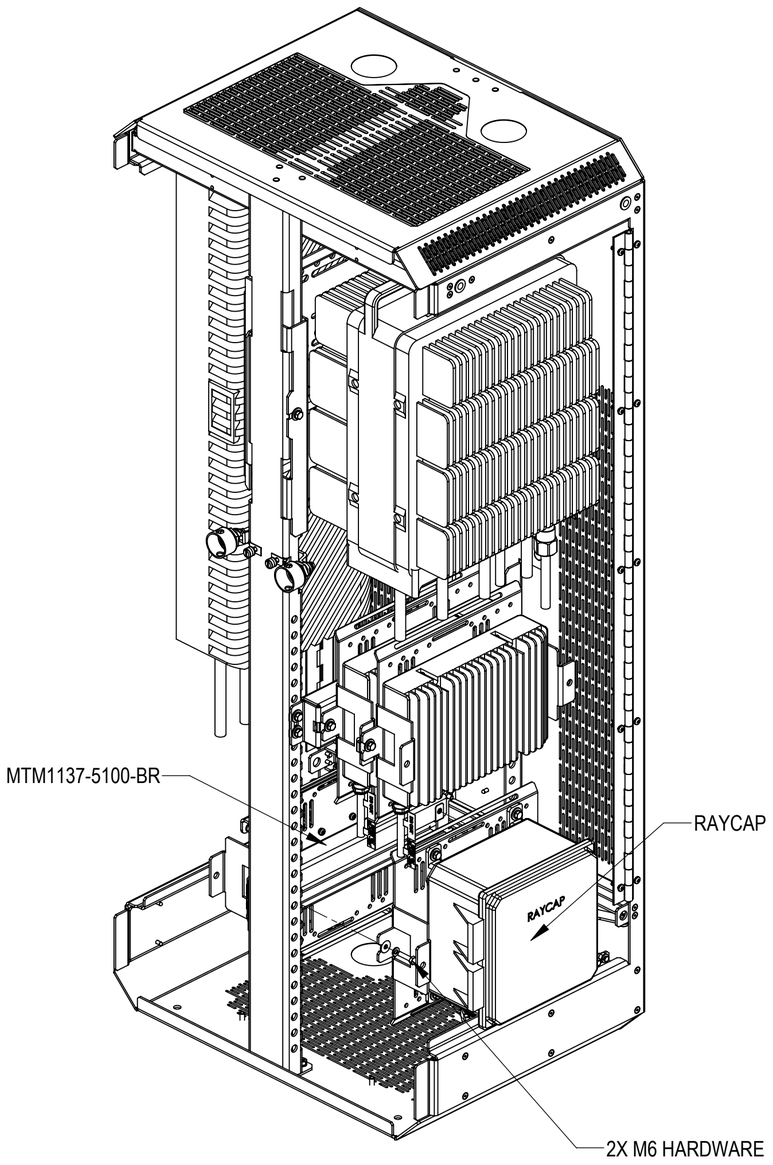


RAYCAP INSTALLATION:


INSTALL RAYCAP WITH BRACKET ON MOUNT BRACKETS MTM1137-5100-BR USING 2 SETS OF M6 HEX BOLT, FLAT WASHER AND CLIP NUT

ANDREW®
an Amphenol company

HARDWARE INSTALLATION (E4)

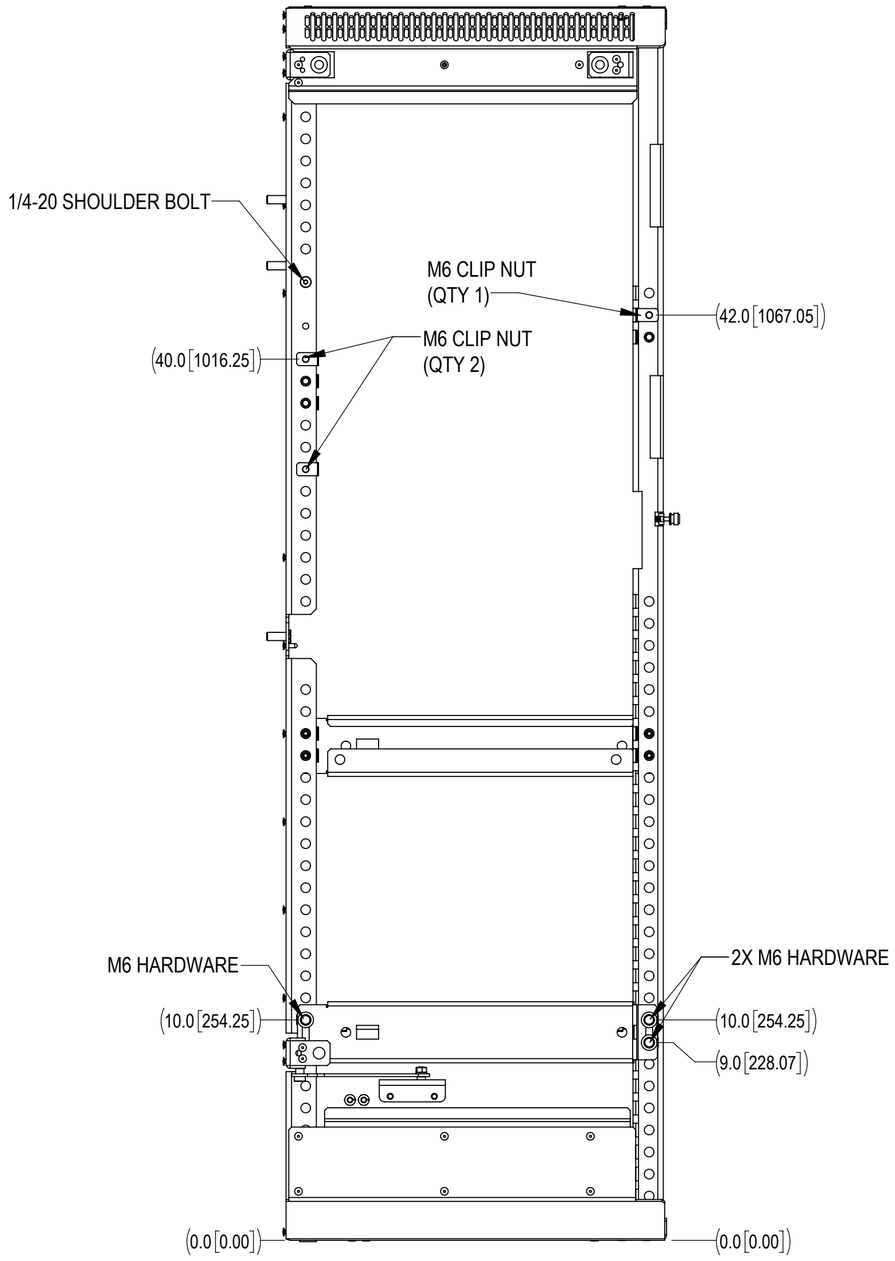


LEFT SIDE VIEW
(BRACKET SHOWN FOR REFERENCE)
(EQUIPMENT NOT SHOWN)

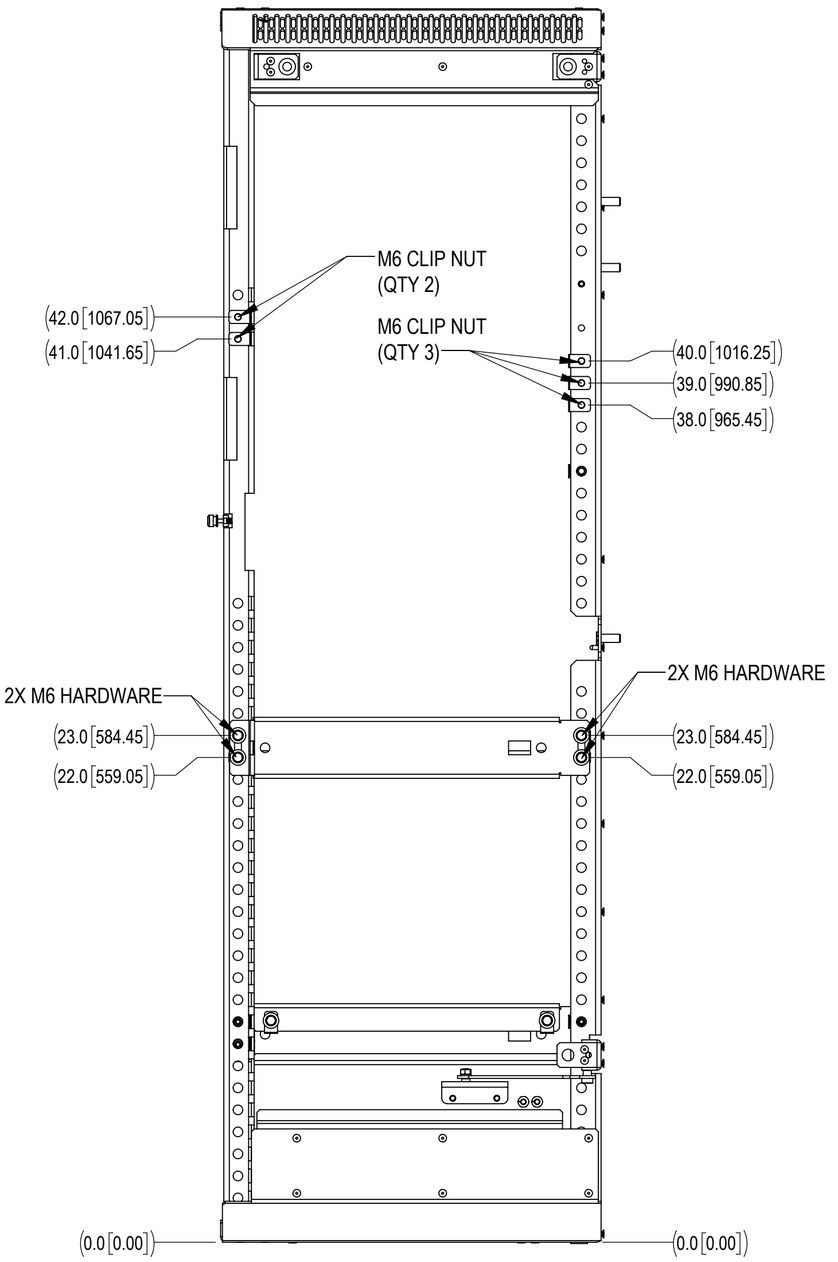


RIGHT SIDE VIEW
(BRACKET SHOWN FOR REFERENCE)
(EQUIPMENT NOT SHOWN)

E4- 8843 & 4478 & (3X)AC08, RAYCAP

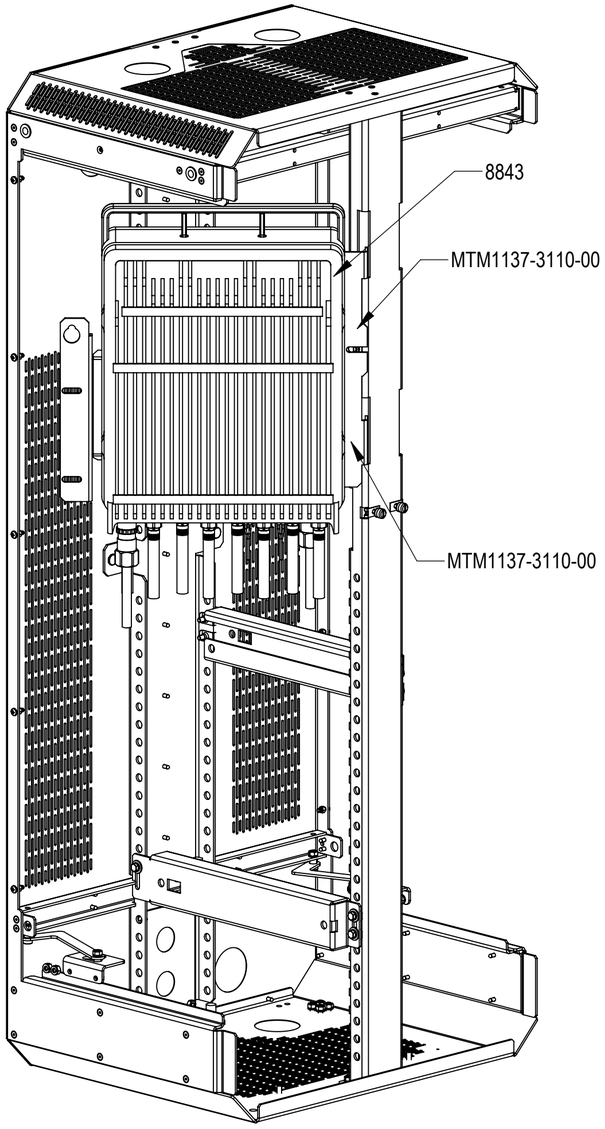


8843 INSTALLATION

1) INSTALL SHOULDER BOLT IN TOP LOCATION
AS SHOWN (SEE SHEET 9)
2) HOLD RRU PANEL BETWEEN 45-90 DEG.
INSERT BOTH TABS INTO SLOT ON UPRIGHT
3) ROTATE PANEL INTO PLACE AND LIFT ONTO
THE REAR UPRIGHT SHOULDER BOLT FOR SUPPORT

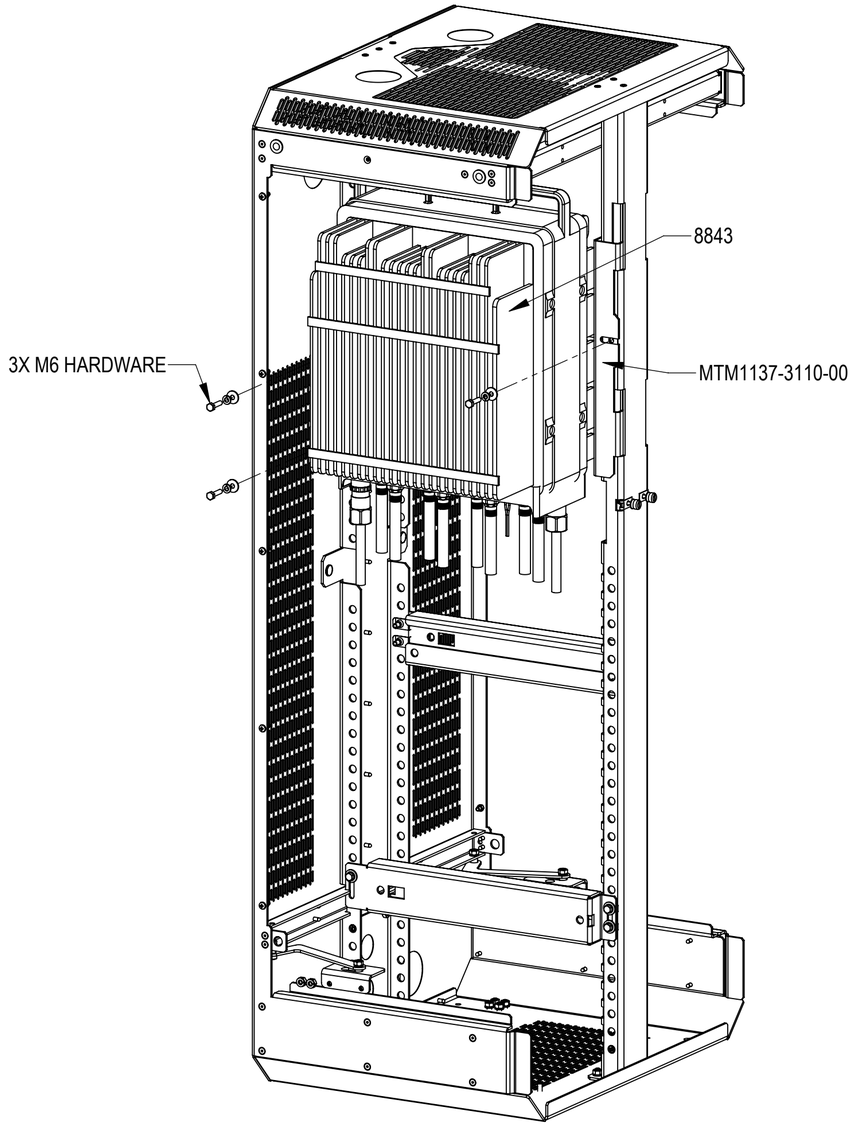

4) SECURE PANEL WITH PROVIDED M6 HARDWARE

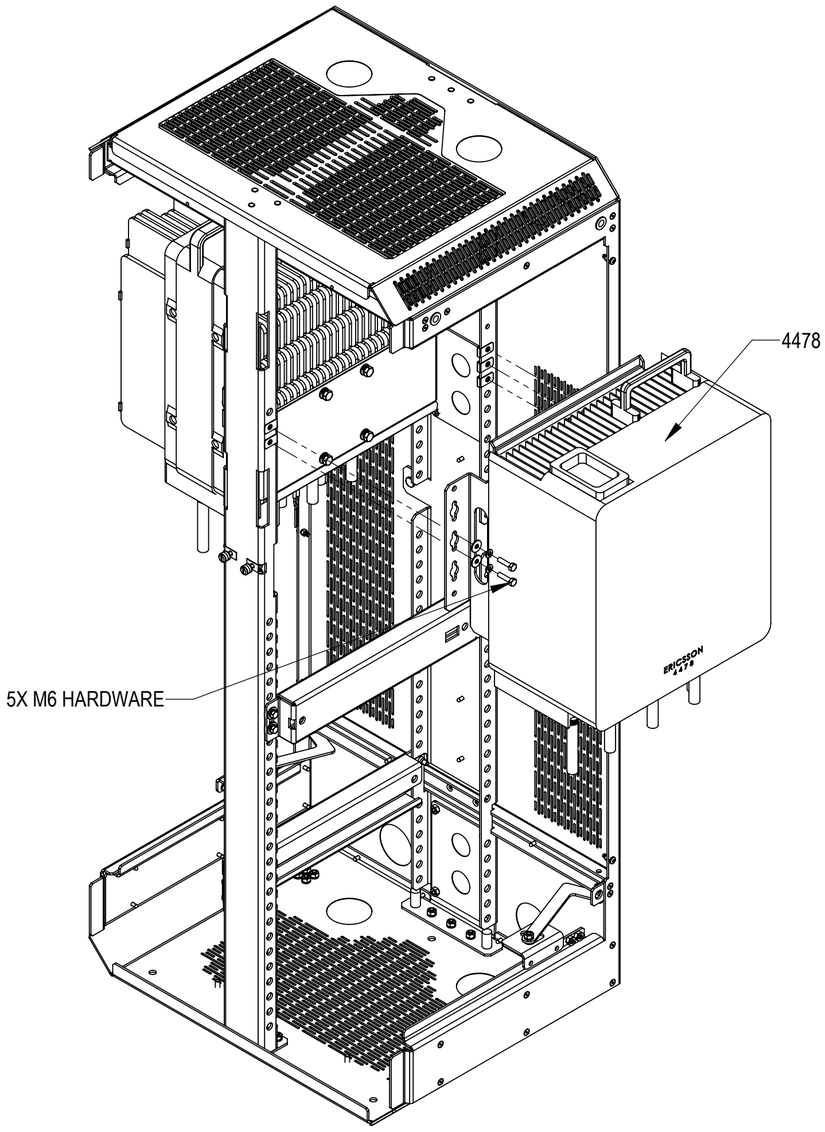


4478 INSTALLATION:

INSTALL 4478 WITH BRACKET MTM1137-3106-00 ON
ENCLOSURE AND SECURE BY 5 SETS OF M6 SCREW
AND CLIP NUT


ANDREW®
an Amphenol company

E4- 4455 & 4449 & (3X)AC08, RAYCAP

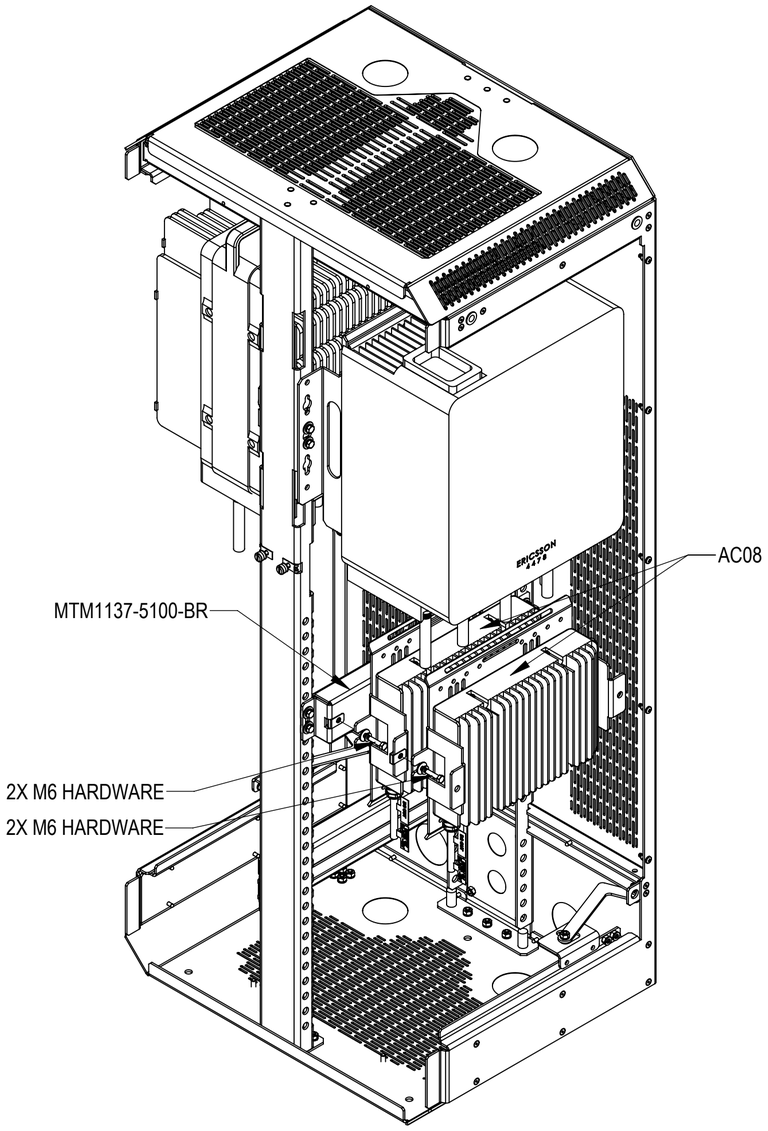


(2X)AC08 INSTALLATION:

INSTALL AC08 WITH BRACKET ON MOUNT BRACKETS MTM1137-5100-BR USING 2 SETS OF M6 HEX BOLT, LOCK WASHER, FLAT WASHER AND CLIP NUT

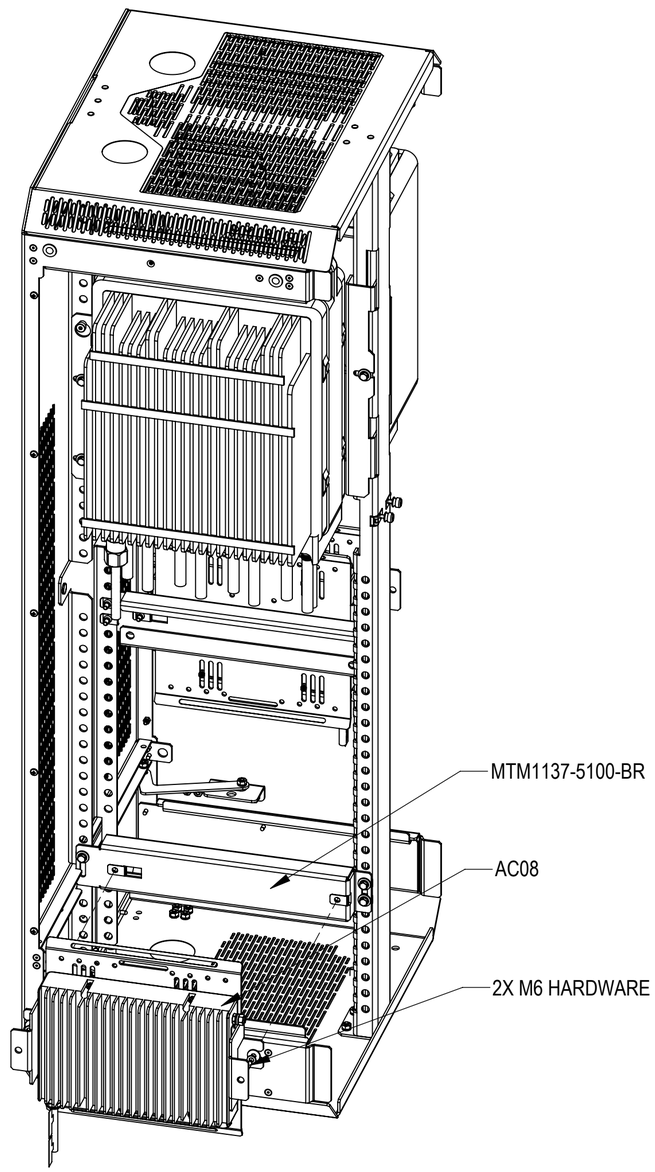

AC08 INSTALLATION:

INSTALL AC08 WITH BRACKET ON MOUNT BRACKETS MTM1137-5100-BR USING 2 SETS OF M6 HEX BOLT, LOCK WASHER, FLAT WASHER AND CLIP NUT

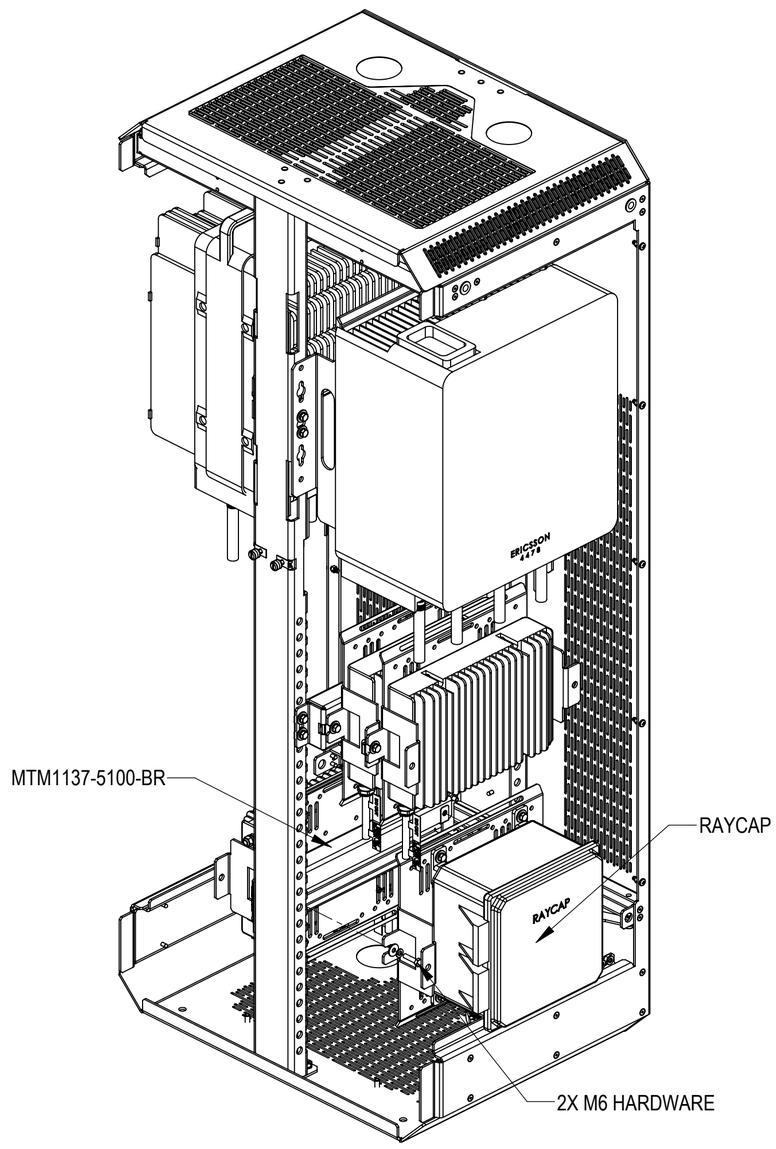

RAYCAP INSTALLATION:

INSTALL RAYCAP WITH BRACKET ON MOUNT BRACKETS MTM1137-5100-BR USING 2 SETS OF M6 HEX BOLT, FLAT WASHER AND CLIP NUT