

Installation Instructions

860692392-AMK-004-INSTALL INSTALLATION INSTRUCTION

INSTALLATION,AMK,ERICSSON,DBHP

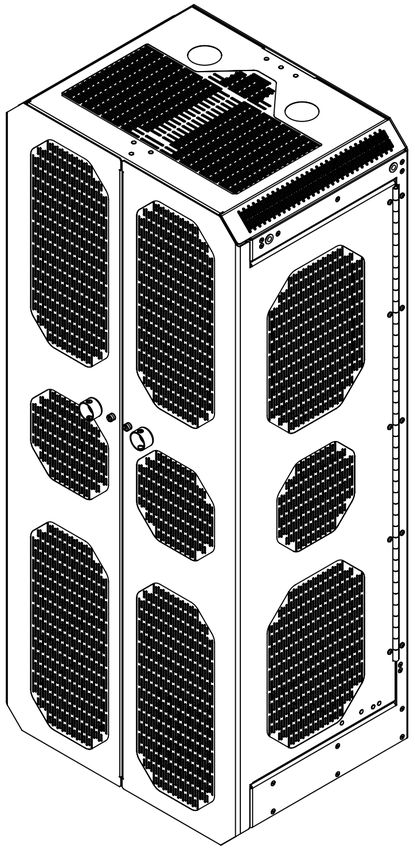

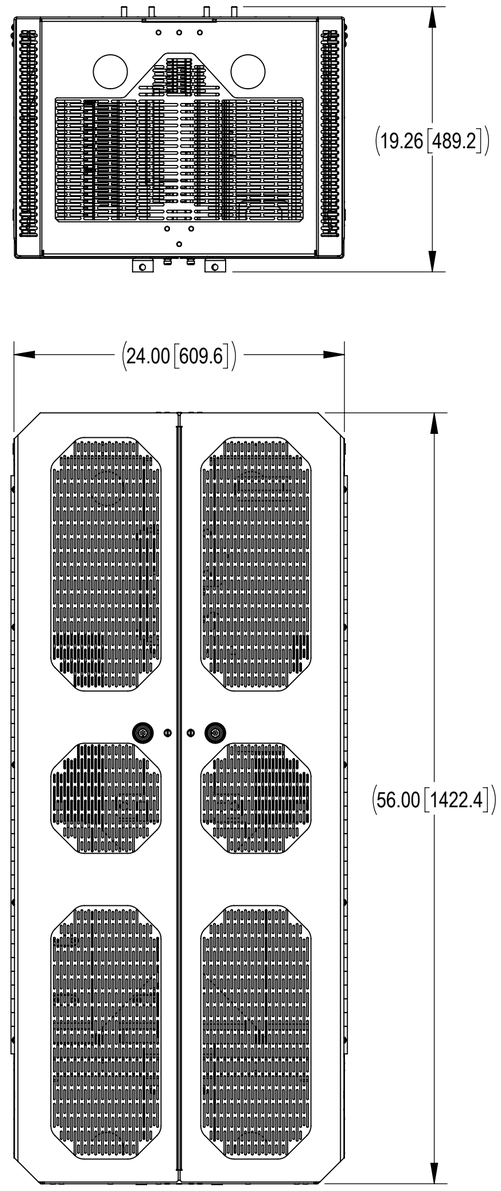

REVISIONS			
REV.	DESCRIPTION	DATE	APPROVED
A	INITIAL RELEASE	ZL1057 08JUN26	LX1002 50108706AMO

This table show the evolution and history of document from initial to current version.


Further information regarding ANDREW's commitment can be found at https://www.andrew.com/sustainability/.
Visit our website or contact your local ANDREW representative for more information.
This product is covered by one or more U.S. patents or their foreign equivalents. For patents, see www.adwpat.com

Installation Instructions

1.0 GENERAL NOTES
1.1 ALL METRIC DIMENSIONS ARE IN BRACKETS [X.X]
2.0 DESIGN NOTES
3.0 MANUFACTURING/SPECIAL REQUIREMENTS
3.1 TIGHTEN HARDWARES, TORQUE VALUE ARE SHOWN BELOW AS REFERENCE,
M6: TORQUE 40.0 IN-LB OR 4.5 N-M (W/ CLIP NUT)
M6: TORQUE 46.0 IN-LB OR 5.2 N-M (W/ THREADED CAST AL)
M6: TORQUE 75.0 IN-LB OR 8.5 N-M (W/ STEEL NUT)
M8: TORQUE 6.6 FT-LB OR 9.0 N-M (W/ THREADED CAST AL)
1/4-20: TORQUE 4.8 FT-LB OR 6.6 N-M
3/8-16: TORQUE 19.6 FT-LB OR 26.6 N-M
3.2 CONFIGURATIONS AND QUANTITY OF EQUIPMENTS IN INSTALLATION ARE LISTED ON TABLE.
3.3 EQUIPMENT INSTALLATION INSTRUCTION ON PAGE 3.


ERICSSON CONFIGURATION	3.2 APPROVED ERICSSON RADIO CONFIGURATIONS			
	6347	PSU DELTA 3.0KW	6304	P700-FSE-THG
E1	1	4		1
E2	1		4	1

Installation Instructions

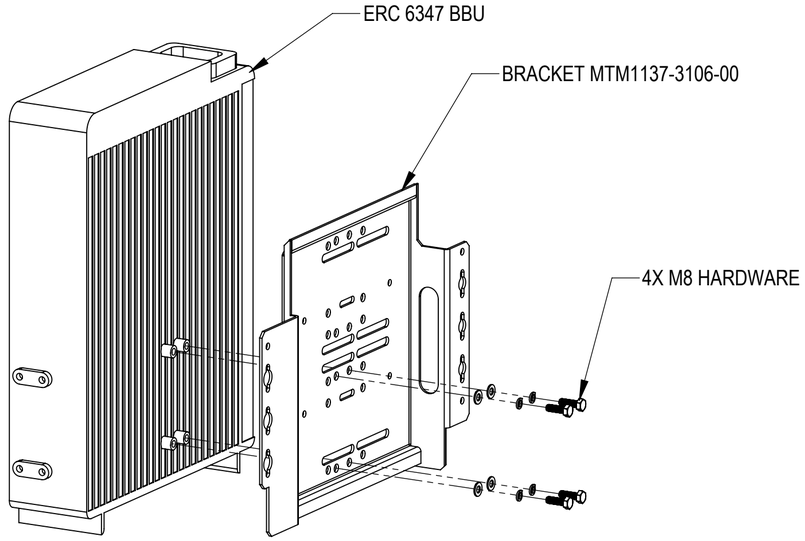


6347:

INSTALL 6347 TO THE BRACKET MTM1137-3106-00 USING 4 SETS OF M8 HEX BOLT, LOCK WASHER AND FLAT WASHER AS SHOWN

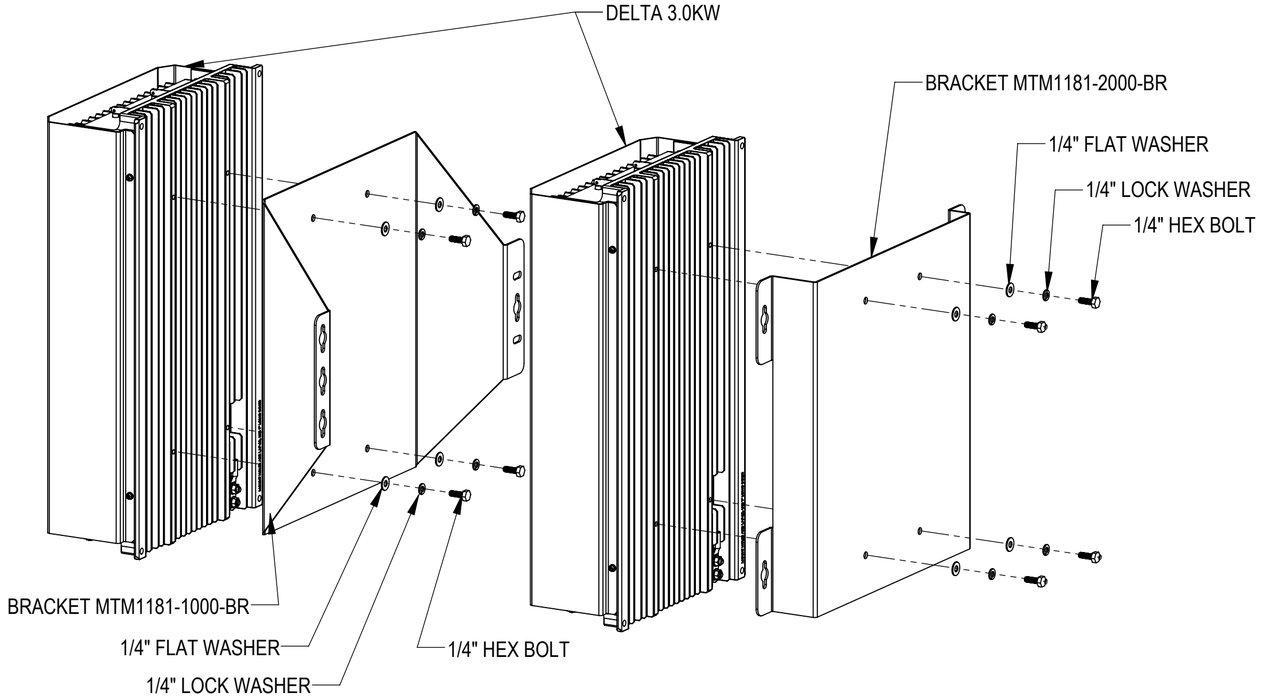


DELTA 3.0KW:

INSTALL (2X)DELTA 3.0KW TO THE BRACKET MTM1181-1000-BR & MTM1181-2000-BR USING 4 SETS OF 1/4" HEX BOLT, LOCK WASHER AND FLAT WASHER AS SHOWN

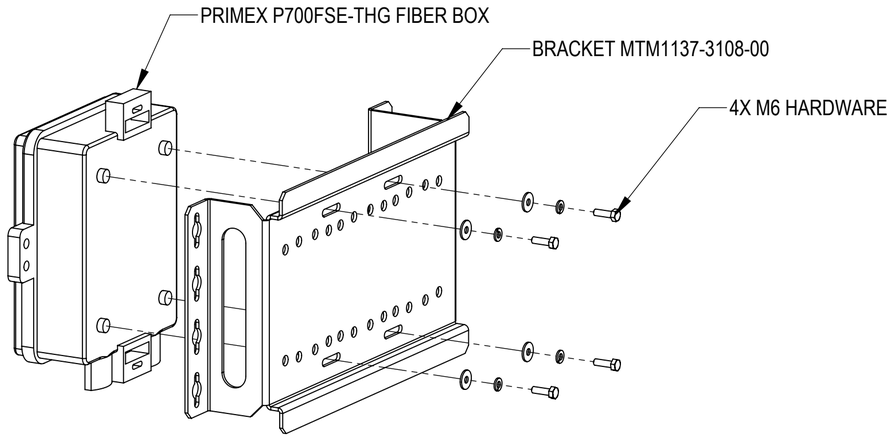

PRIMEX P700FSE-THG FIBER BOX:


INSTALL PRIMEX P700-FSE-THG TO THE BRACKET MTM1137-3108-00 USING 4 SETS OF M6 HEX BOLT, LOCK WASHER AND FLAT WASHER AS SHOWN

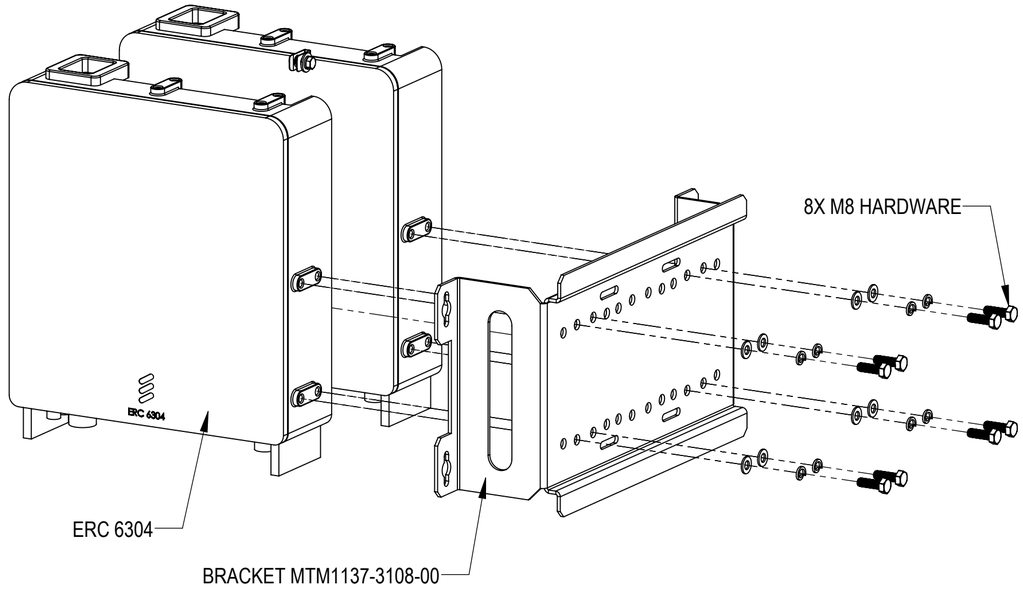


6304:


INSTALL (2X)6304 TO THE BRACKET MTM1137-3108-00 USING 8 SETS OF M8 HEX BOLT, LOCK WASHER AND FLAT WASHER AS SHOWN

E1: ERC 6347 (QTY 1); PSU DELTA 3.0KW (QTY 4); P700-FSE-THG (QTY 1)

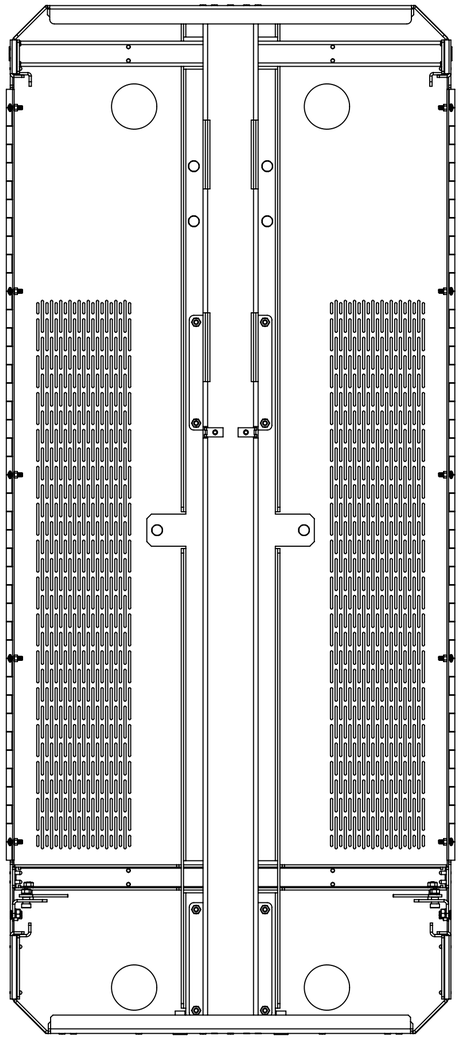

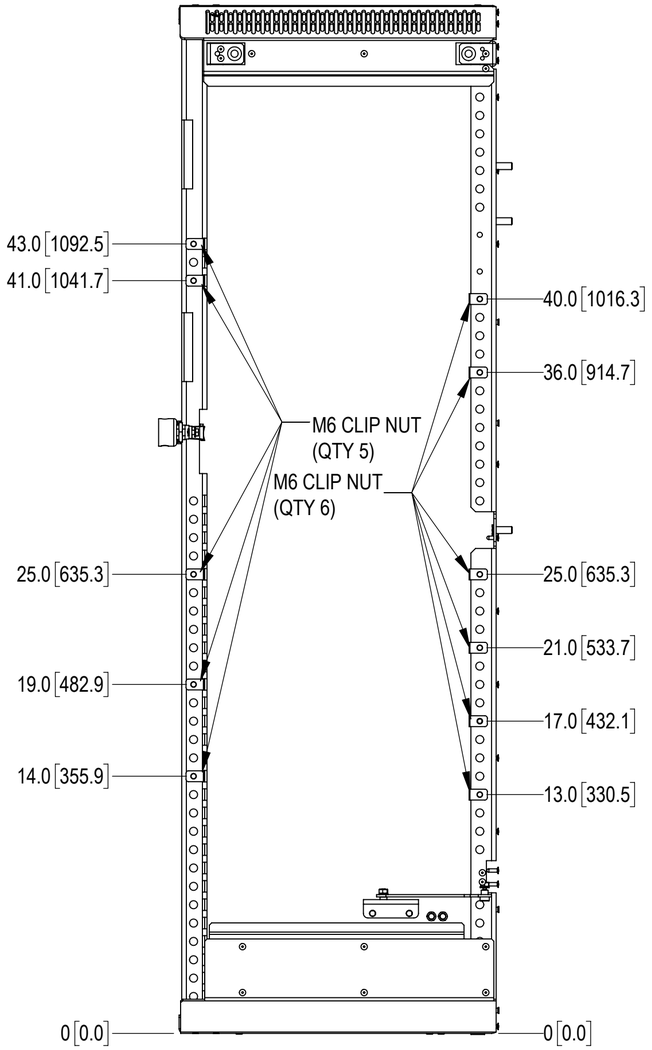

LEFT SIDE VIEW

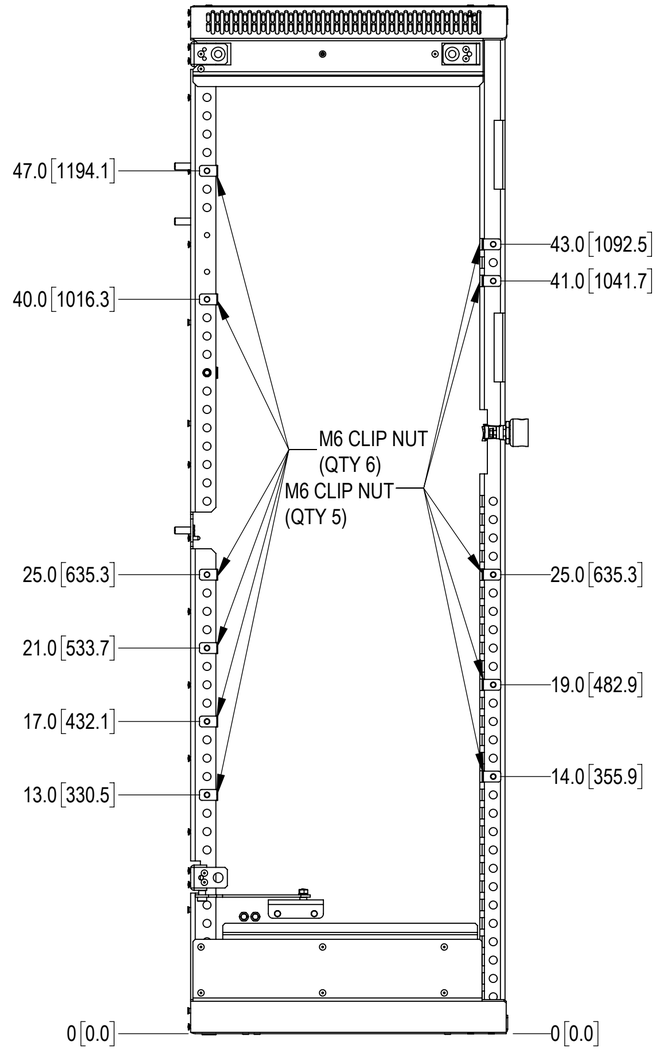

RIGHT SIDE VIEW

STEP 1:


OPEN THE DOOR


STEP 2:

HARDWARE INSTALLATION


Installation Instructions

E1: ERC 6347 (QTY 1); PSU DELTA 3.0KW (QTY 4); P700-FSE-THG (QTY 1)

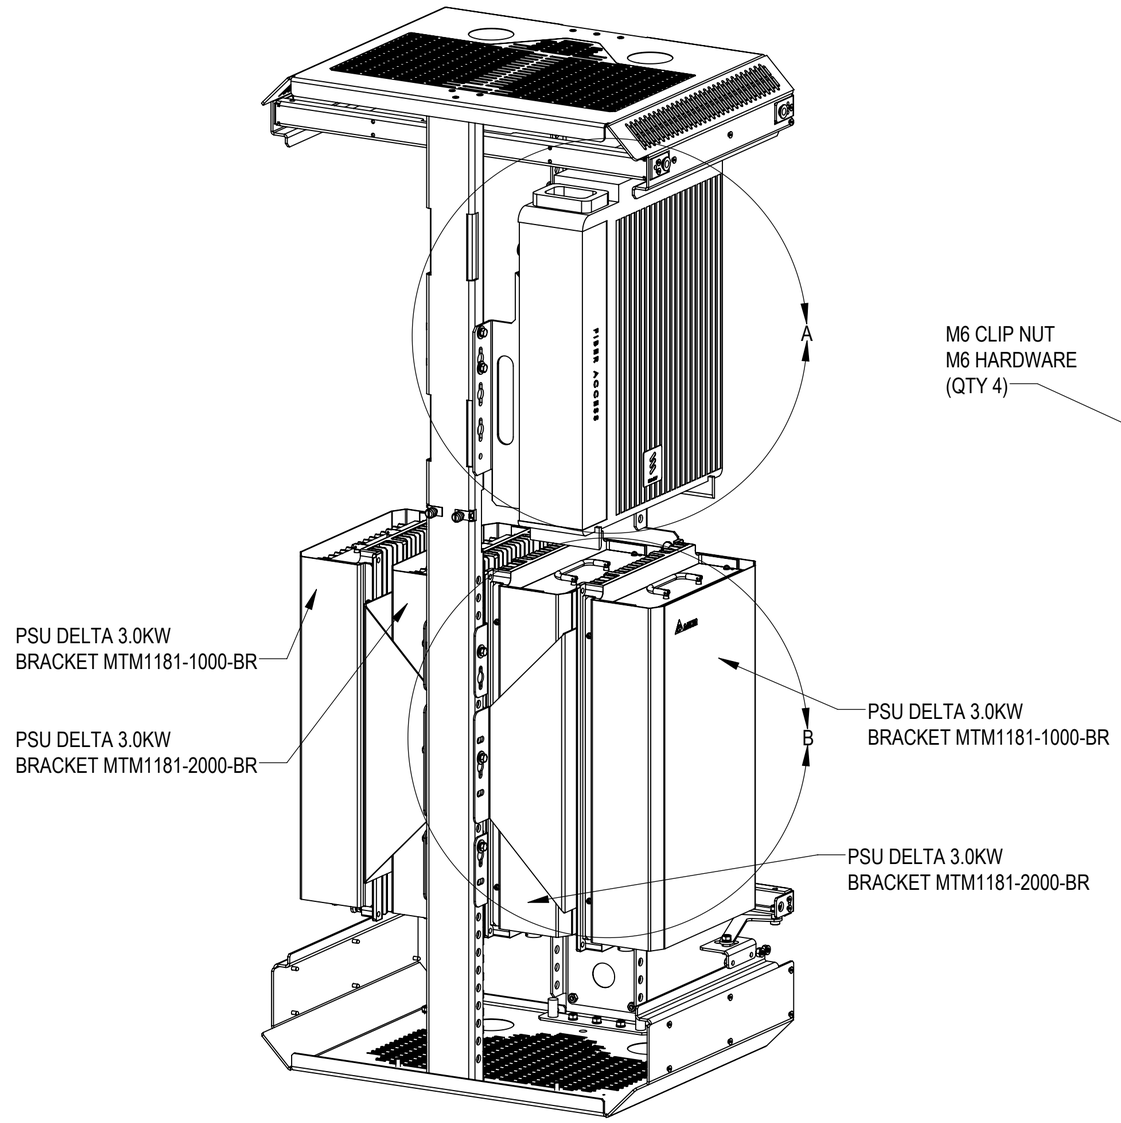

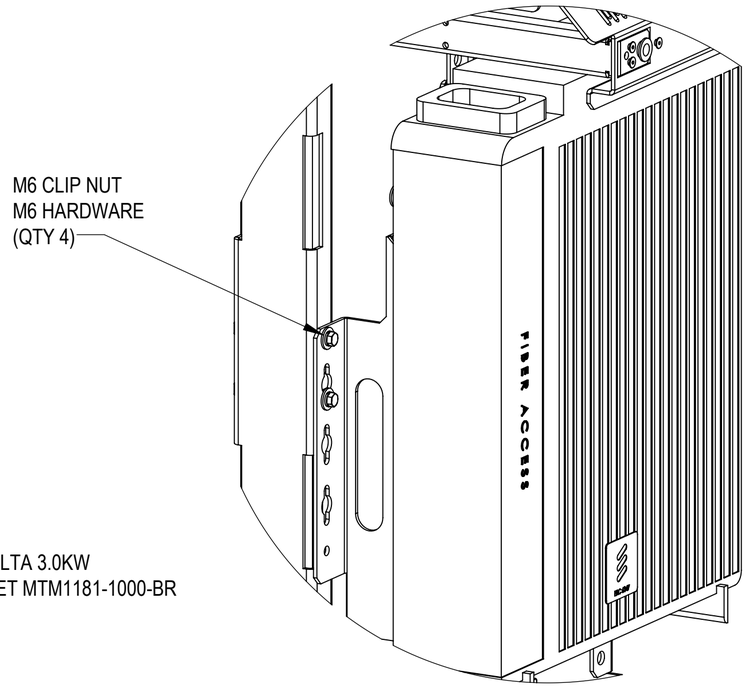

DETAIL A
SCALE 2 : 7

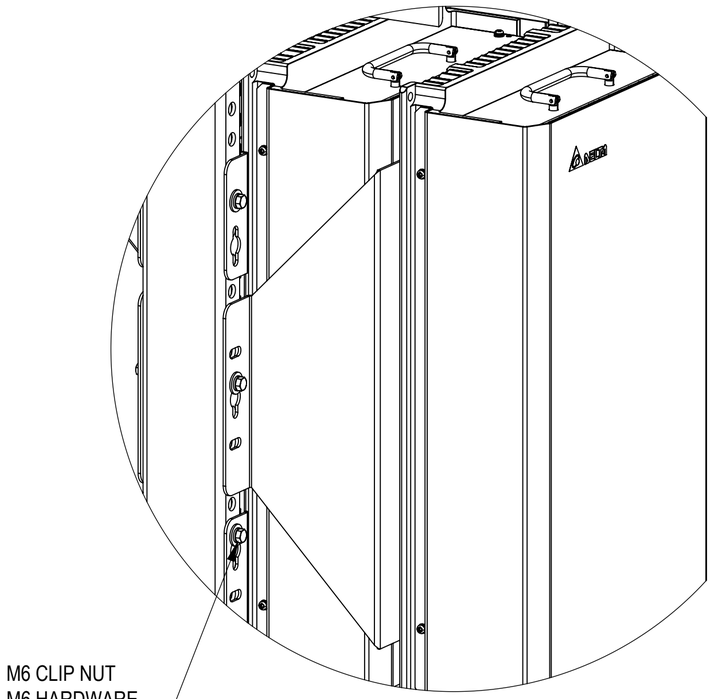


DETAIL B
SCALE 2 : 7


STEP 3:

INSTALL ERC 6347 WITH BRACKET MTM1137-3106-00 TO
MAIN FRAME WITH 4 SETS OF M6 SCREWS, M6 LOCK
& FLAT WASHER, 4EA M6 CLIP NUTS AS SHOWN.
INSTALL INNER PSU DELTA 3.0KW WITH BRACKET MTM1181-2000-BR
TO MAIN FRAME FIRST, THEN INSTALL THE OUTER PSU DELTA 3.0KW
WITH BRACKET MTM1181-1000-BR TO MAIN FRAME WITH 7 SETS
OF M6 SCREWS, M6 LOCK & WASHERS, 7EA M6 CLIP NUTS AS SHOWN,
REPEAT PROCESS TO INSTALL OPPOSITE SIDE PSU DELTA 3.0KW WITH BRACKETS


Installation Instructions

E1: ERC 6347 (QTY 1); PSU DELTA 3.0KW (QTY 4); P700-FSE-THG (QTY 1)

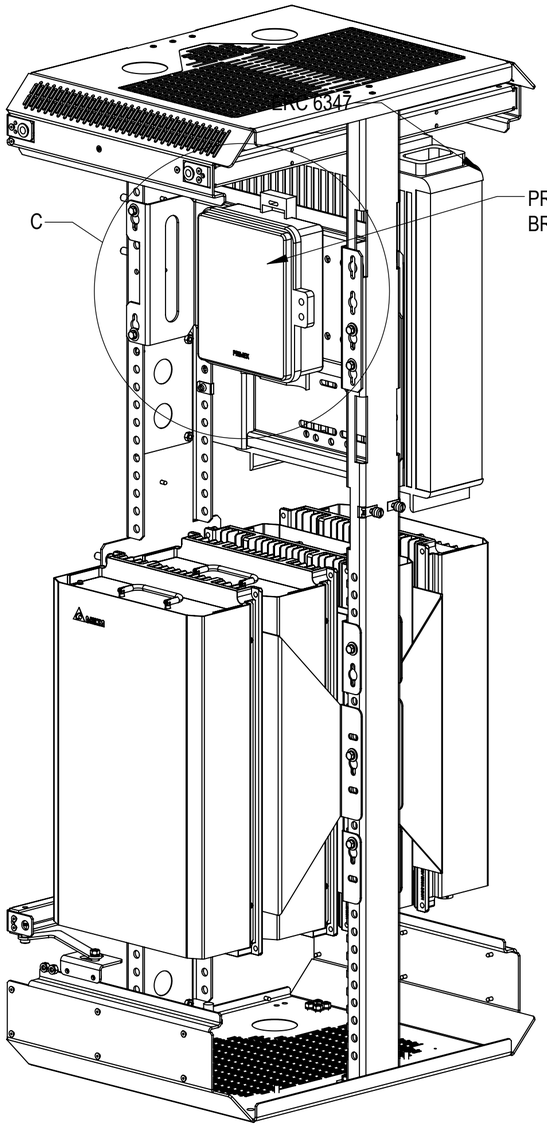

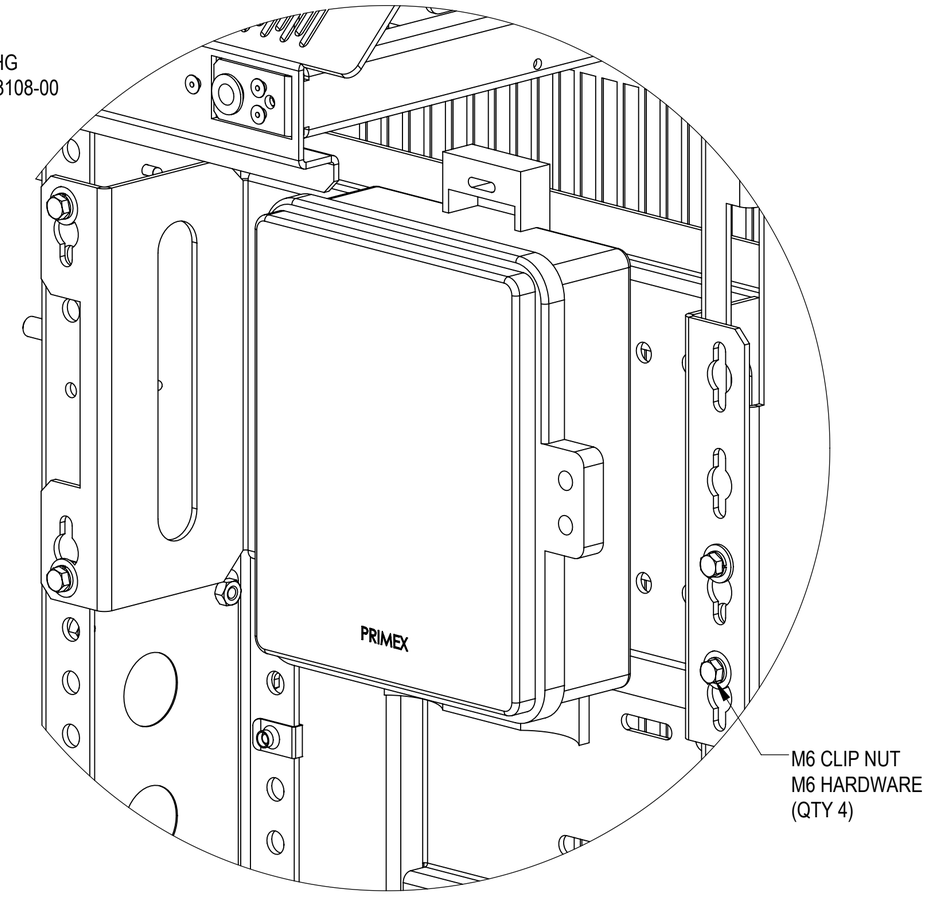

DETAIL C
SCALE 1 : 2

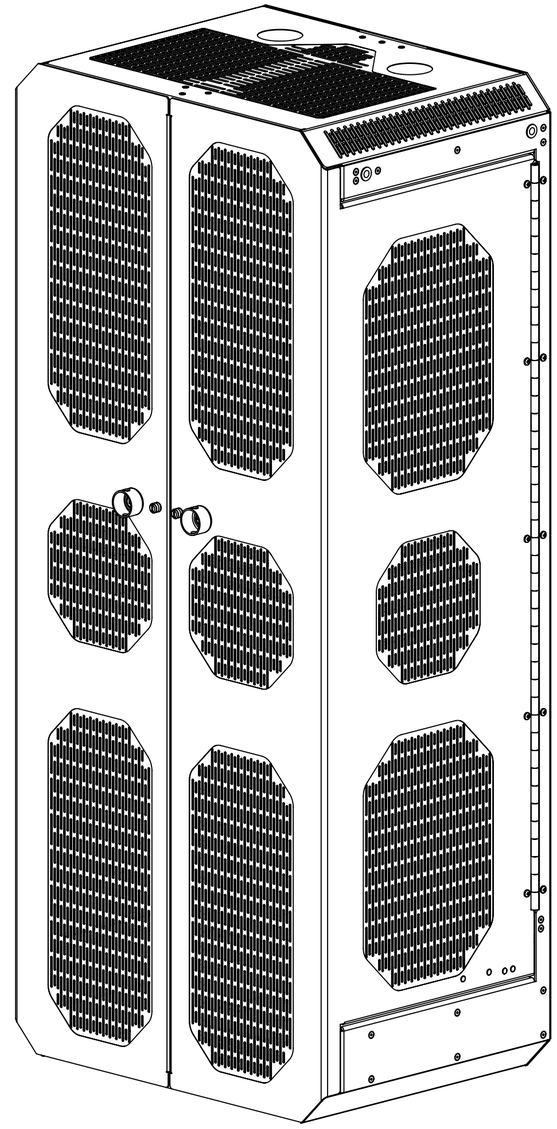


STEP 4:


INSTALL PRIMEX P700-FSE-THG WITH BRACKET MTM1137-3108-00 TO MAIN FRAME WITH 4 SETS OF M6 SCREWS, M6 LOCK & FLAT WASHER, 4EA M6 CLIP NUTS AS SHOWN.


STEP 5:

CLOSE THE DOOR

E2: ERC 6347 (QTY 1); ERC 6304 (QTY 4); P700-FSE-THG (QTY 1)

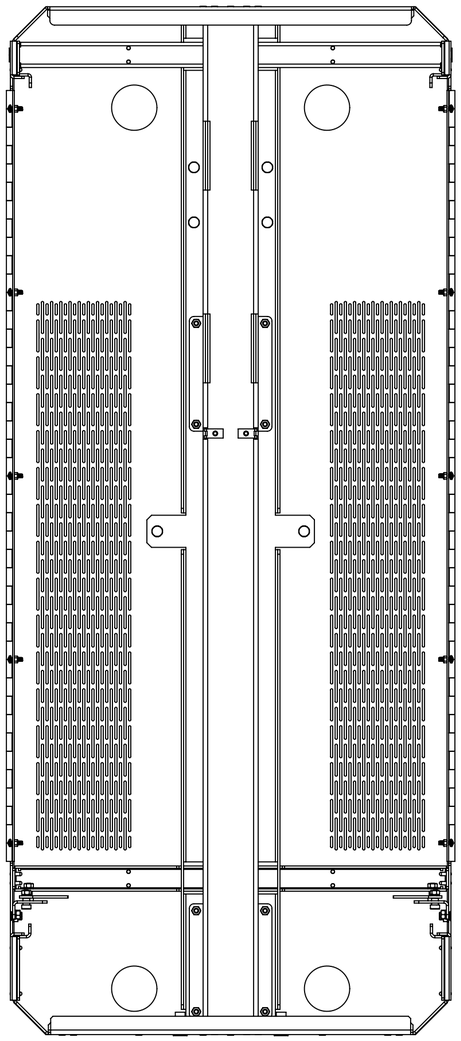

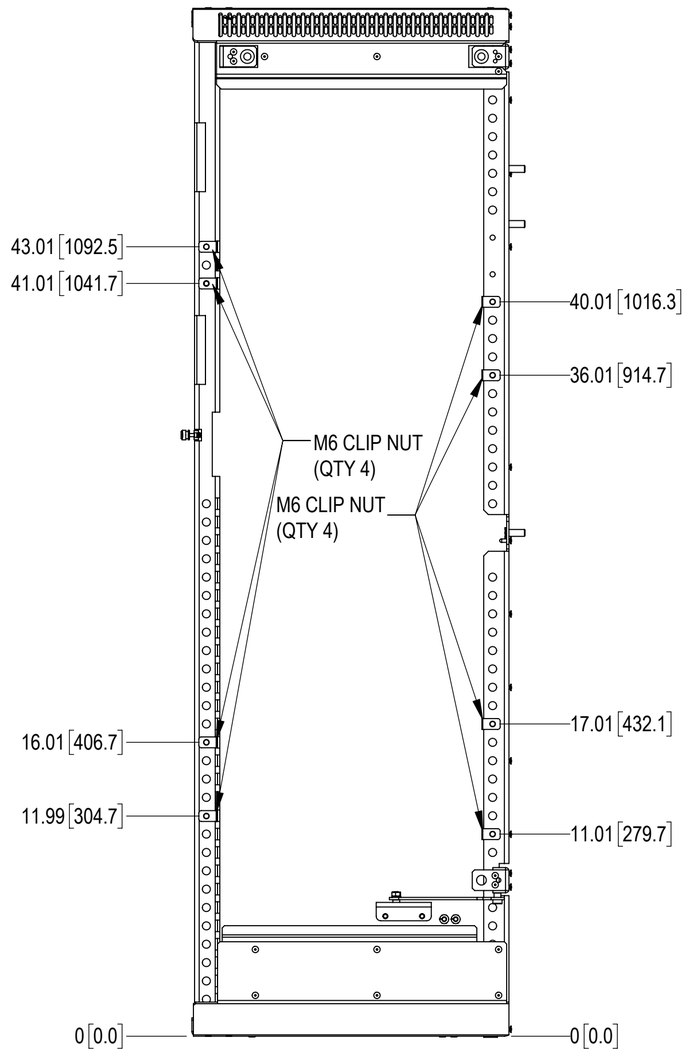

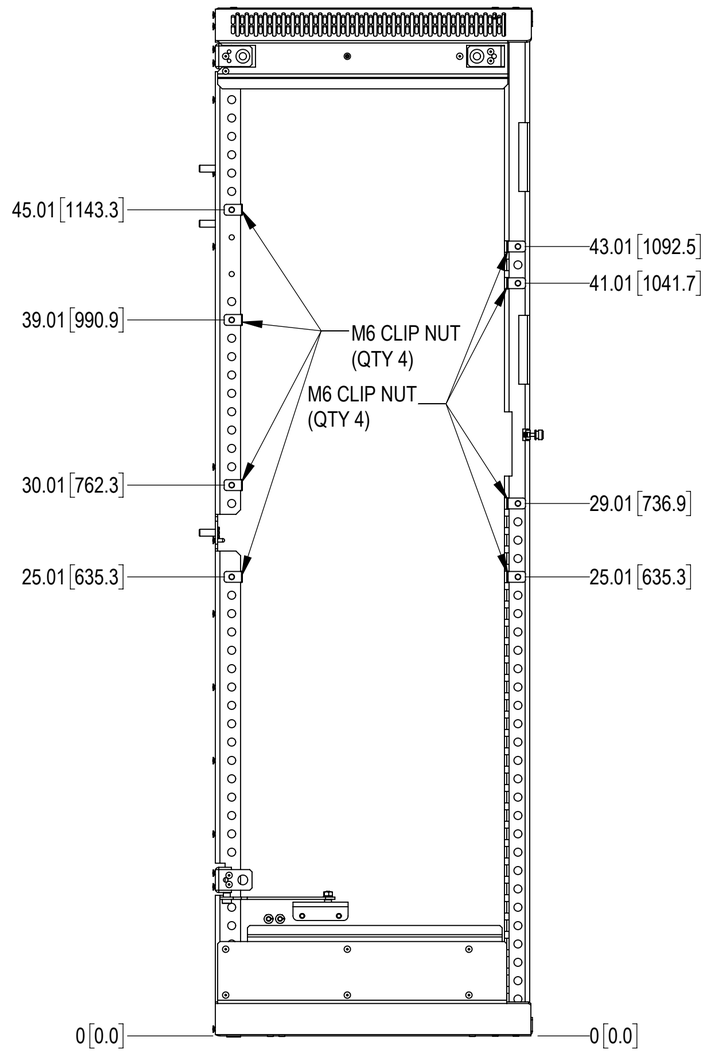

LEFT SIDE VIEW

RIGHT SIDE VIEW


STEP 1:


OPEN THE DOOR

STEP 2:


HARDWARE INSTALLATION

E2: ERC 6347 (QTY 1); ERC 6304 (QTY 4); P700-FSE-THG (QTY 1)

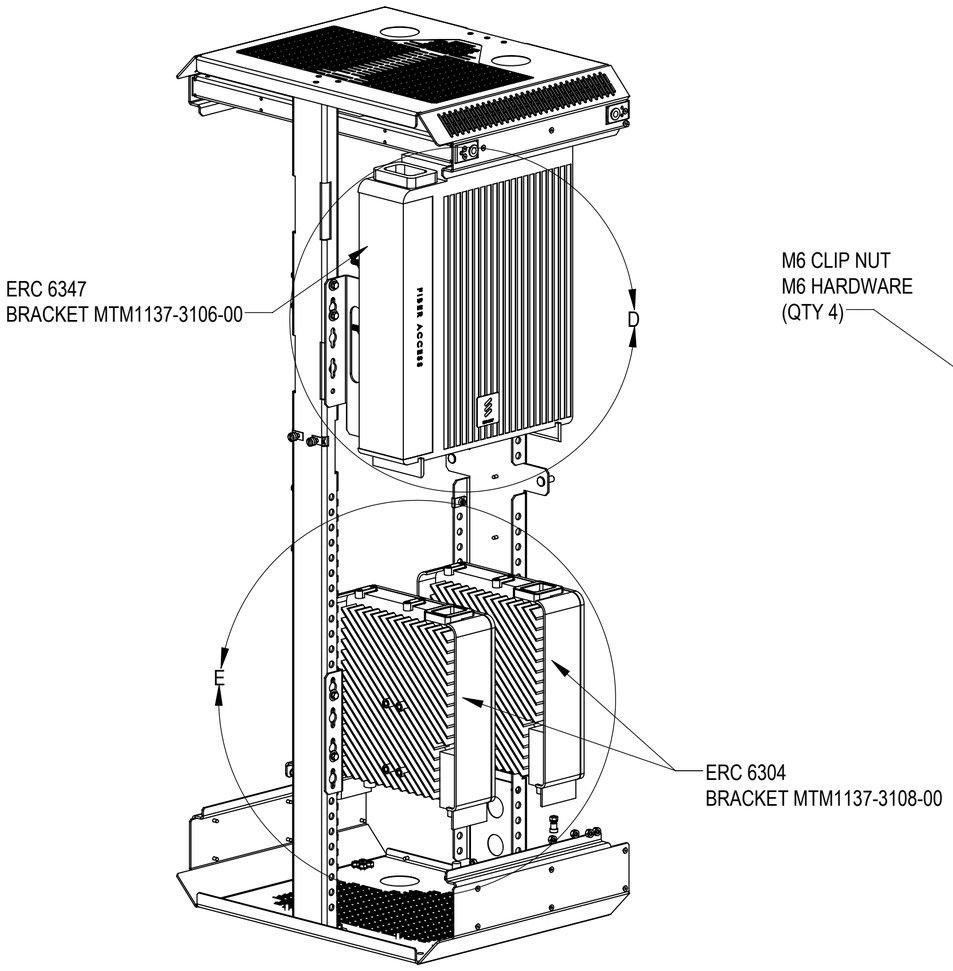

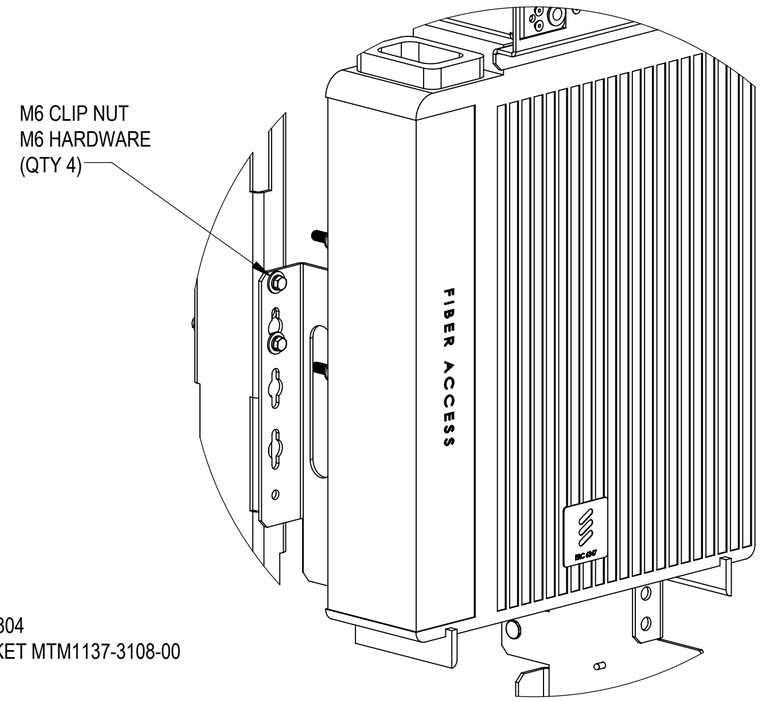

DETAIL D
SCALE 2 : 7

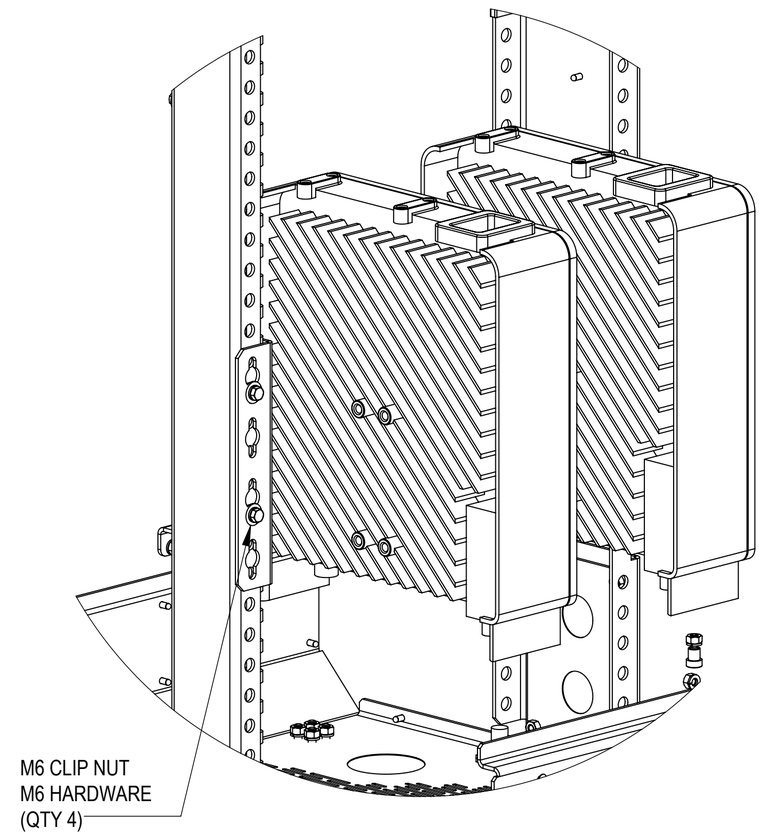



DETAIL E
SCALE 2 : 7

STEP 3:


INSTALL ERC 6347 WITH BRACKET MTM1137-3106-00 TO MAIN FRAME
WITH 4 SETS OF M6 SCREWS, M6 LOCK & FLAT WASHER, 4EA M6
CLIP NUTS AS SHOWN.
INSTALL ERC 6304 WITH BRACKET MTM1137-3108-00 TO MAIN FRAME
WITH 4 SETS OF M6 SCREWS, M6 LOCK & WASHERS, 4EA CLIP NUTS AS SHOWN

E2: ERC 6347 (QTY 1); ERC 6304 (QTY 4); P700-FSE-THG (QTY 1)

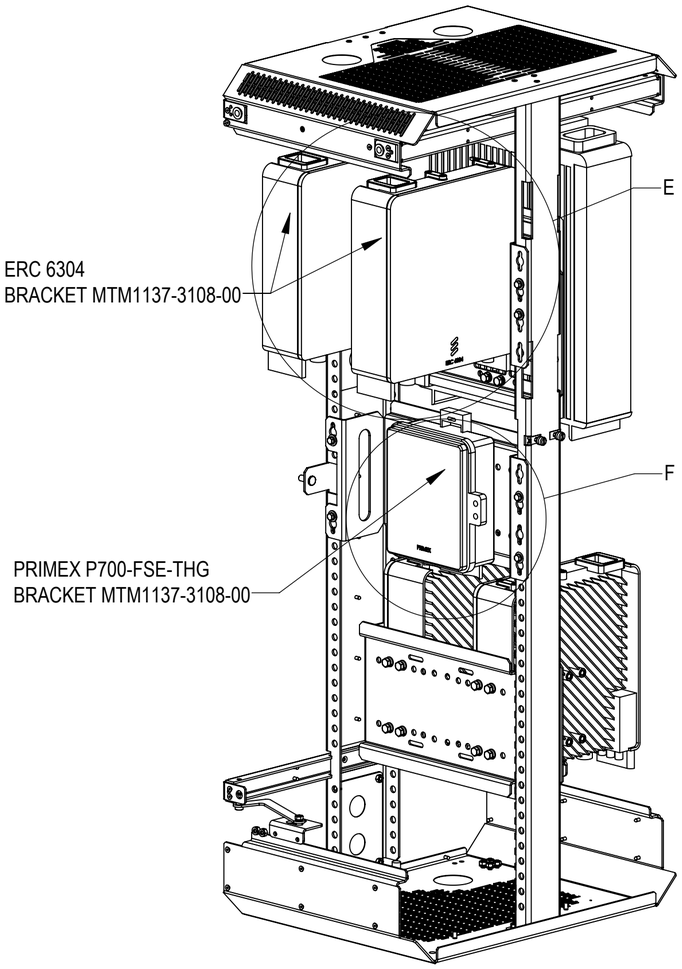


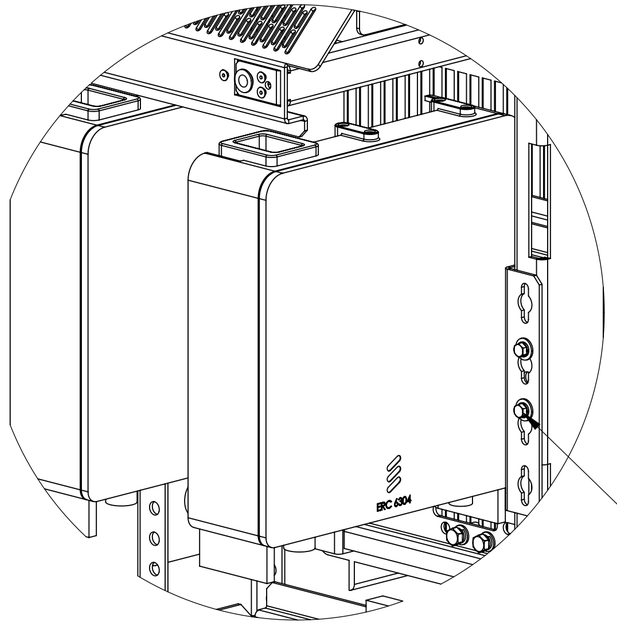

DETAIL E
SCALE 2 : 7

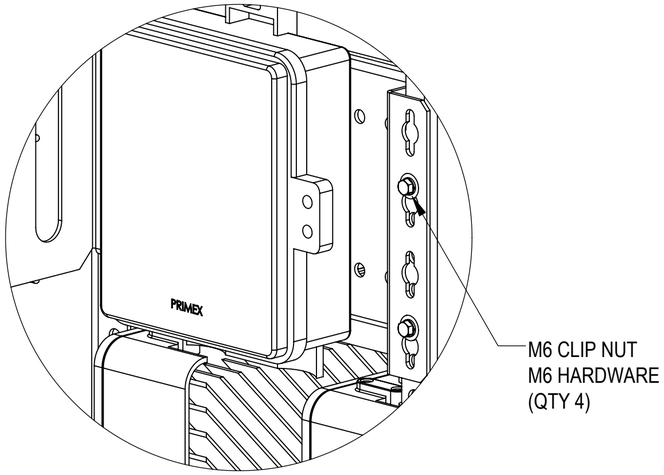

DETAIL F
SCALE 1 : 3

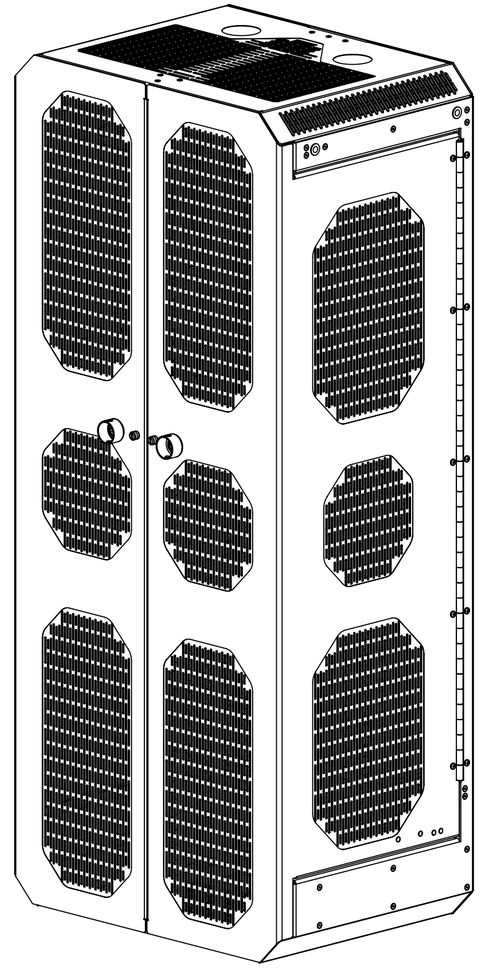

STEP 4:

INSTALL ERC 6304 WITH BRACKET MTM1137-3108-00 TO MAIN FRAME WITH 4 SETS OF M6 SCREWS, M6 LOCK & FLAT WASHER, 4EA M6 CLIP NUTS AS SHOWN.
INSTALL PRIMEX P700-FSE-THG WITH BRACKET MTM1137-3108-00 TO MAIN FRAME WITH 4 SETS OF M6 SCREWS, M6 LOCK & FLAT WASHER, 4EA M6 CLIP NUTS AS SHOWN.

STEP 5:

CLOSE THE DOOR